

ViewSonic®

CD4232 LCD Monitor

- User Guide
- Guide de l'utilisateur
- Guía del usuario

IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic Corporation, which is also found on our web site at <http://www.viewsonic.com> in English, or specific languages using the Regional selection box in the upper right corner of our website.

“Antes de operar su equipo lea cuidadosamente las instrucciones en este manual”



Model No. : VS13228

Content

Safety Precautions	5
Package Contents	6
Optional accessories	6
Parts Name and Functions	7
Control Panel	7
Terminal Panel	8
Wireless Remote Control	9
Installing the Remote Control Batteries	10
Operating Range for the Remote Control	10
Handling the remote control	10
Setup Procedure	11
How to Mount and Attach Options to the LCD Monitor	13
Ventilation Requirements for enclosure mounting	14
To avoid monitor from falling	14
Connections	15
Before making connections:	15
Wiring Diagram	15
Connecting a Personal Computer	16
Connecting with Digital Interface Equipment	17
Connecting a DVD Player with component output	18
Connecting a VCR with composite (CVBS) and S-Video outputs	19
Connecting to External Speakers	20
Basic Operation	21
Power ON and OFF Modes	21
Power Indicator	21
Using Power Management	21
Selecting a video source	22
Picture Mode	22
OSD (On-Screen-Display) Controls	23
Picture	24
Sound	26
Option	27
Setting	29
For Long Life Use of Public Display	33
Controlling the LCD monitor via RS-232C Remote Control	34
Appendix: Installing stands	35
Features	36
Troubleshooting	37
Specifications	38
Product Specifications	38
Supported Input Signal Resolution	39
Supported Signal Source and Resolution in PIP Mode	40
Customer Support	48
Limited Warranty	49
Mexico Limited Warranty	51

Compliance Information

For U.S.A.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

For Canada

- This Class B digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Important Safety Instructions

1. Read these instructions completely before using the equipment.
2. Keep these instructions in a safe place.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this equipment near water. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean with a soft, dry cloth. If further cleaning is required.
7. Do not block any ventilation openings. Install the equipment in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
9. Do not attempt to circumvent the safety provisions of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, consult an electrician for replacement of the outlet.
10. Protect the power cord from being tread upon or pinched, particularly at the plug, and the point where it emerges from the equipment. Be sure that the power outlet is located near the equipment so that it is easily accessible.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the equipment. When a cart is used, use caution when moving the cart/equipment combination to avoid injury from tipping over.
13. Unplug this equipment when it will be unused for long periods of time.
14. Refer all servicing to qualified service personnel. Service is required when the unit has been damaged in any way, such as: if the power-supply cord or plug is damaged, if liquid is spilled onto or objects fall into the unit, if the unit is exposed to rain or moisture, or if the unit does not operate normally or has been dropped.



Declaration of RoHS Compliance

This product has been designed and manufactured in compliance with Directive 2002/95/EC of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr ⁶⁺)	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%

Certain components of products as stated above are exempted under the Annex of the RoHS Directives as noted below:

Examples of exempted components are:

1. Mercury in compact fluorescent lamps not exceeding 5 mg per lamp and in other lamps not specifically mentioned in the Annex of RoHS Directive.
2. Lead in glass of cathode ray tubes, electronic components, fluorescent tubes, and electronic ceramic parts (e.g. piezoelectronic devices).
3. Lead in high temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
4. Lead as an alloying element in steel containing up to 0.35% lead by weight, aluminium containing up to 0.4% lead by weight and as a copper alloy containing up to 4% lead by weight.

Copyright Information

Copyright © ViewSonic® Corporation, 2010. All rights reserved.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at:

www.viewsonic.com

For Your Records

Product Name:	CD4232 ViewSonic 42" LCD Monitor
Model Number:	VS13228
Document Number:	CD4232_UG_ENG Rev.1A 01-01-2010
Serial Number:	_____
Purchase Date:	_____

Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

The lamp in this product contains mercury. Please dispose of properly in accordance with environmental laws of your location.

Safety Precautions

FOR OPTIMUM PERFORMANCE, PLEASE NOTE THE FOLLOWING WHEN SETTING UP AND USING THE LCD COLOR MONITOR:

- DO NOT REMOVE MONITOR BACK COVER. There are no user serviceable parts inside and opening or removing covers may expose you to dangerous shock hazards or other risks. Refer all servicing to qualified service personnel.
- Do not spill any liquids into the cabinet or use your monitor near water.
- Do not insert objects of any kind into the cabinet slots, as they may touch dangerous voltage points, which can be harmful or fatal or may cause electric shock, fire or equipment failure.
- Do not place any heavy objects on the power cord. Damage to the cord may cause shock or fire.
- Do not place this product on a sloping or unstable cart, stand or table, as the monitor may fall, causing serious damage to the monitor.
- When operating the LCD monitor with an AC 100-120V power supply in North America, use a power supply cord provided with this monitor.
- When operating the LCD monitor with an AC 220-240V power supply in Europe, use a power supply cord provided with this monitor.
- In UK, use a BS-approved power cord with molded plug having a black (10A) fuse installed for use with this monitor. If a power cord is not supplied with this monitor, please contact your supplier.
- When operating the LCD monitor with a 220-240V AC power supply in Australia, use the power cord provided with this monitor. If a power cord is not supplied with this monitor, please contact your supplier.
- For all other case, use a power cord that matches the AC voltage of the power outlet and has been approved by and complies with the safety standard of your particular country.
- Do not place any objects onto the monitor and do not use the monitor outdoors.
- The inside of the fluorescent tube located within the LCD monitor contains mercury. Please follow the laws or rules of your municipality to dispose of the tube properly.
- Do not bend power cord.
- Do not use monitor in high temperature, humid, dusty, or oily areas.
- If monitor or glass is broken, do not come in contact with the liquid crystal and handle with care.
- Allow adequate ventilation around the monitor, so that heat can properly dissipate. Do not block ventilated openings or place the monitor near a radiator or other heat sources. Do not put anything on top of the monitor.
- The power cable connector is the primary means of detaching the system from the power supply. The monitor should be installed close to a power outlet, which is easily accessible.
- Handle with care when transporting. Save packaging for transporting.
- Please clean the holes of back cabinet to reject dirt and dust at least once a year because of set reliability.
- If using the cooling fan continuously, it's recommended to wipe holes a minimum of once a month.
- When installing the remote control batteries;
 - Align the batteries according to the (+) and (-) indications inside the case.
 - Align the (-) indication of the battery first inside the case.



CAUTION:

Immediately unplug your monitor from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the monitor.
- If the monitor has been exposed to rain or water.
- If the monitor has been dropped or the cabinet damaged.
- If the monitor does not operate normally by following operating instructions.

Recommended Use

CAUTION:

- For optimum performance, allow 20 minutes for warm-up.
- Rest your eyes periodically by focusing on an object at least 5 feet away. Blink often.
- Position the monitor at a 90° angle to windows and other light sources to minimize glare and reflections.
- Clean the LCD monitor surface with a lint-free, nonabrasive cloth. Avoid using any cleaning solution or glass cleaner!
- Adjust the monitor's brightness, contrast and sharpness controls to enhance readability.
- Avoid displaying fixed patterns on the monitor for long periods of time to avoid image persistence (after image effects).
- Get regular eye checkups.


Ergonomics

To realize the maximum ergonomic benefits, we recommend the following:


- Use the preset Size and Position controls with standard signals.
- Use the preset Color Setting.
- Use non-interlaced signals.
- Do not use primary color blue on a dark background, as it is difficult to see and may produce eye fatigue due to insufficient contrast.

Package Contents


Your new CD4232 monitor box should contain the following:

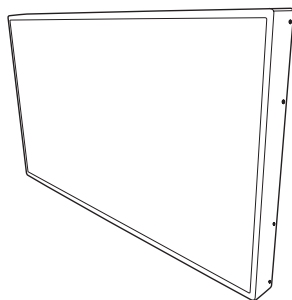


LCD monitor

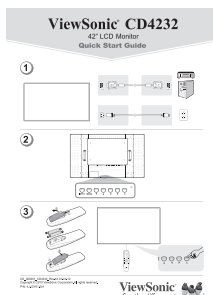


Quick Start Guide

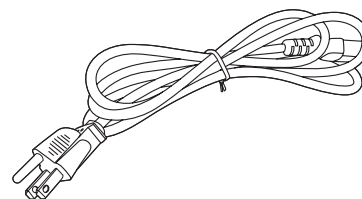


Power cord for North America

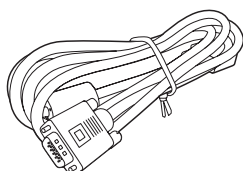


VGA cable

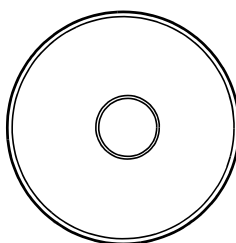

CD Wizard




Wireless Remote Control

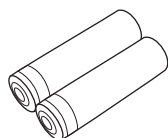


AAA battery (x 2)

Optional accessories

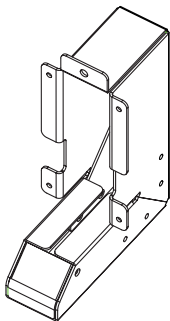Stand (STND-011)			Speakers	
				
Monitor stand (x 2)	M6 screw for stand installation (x 2)	M4 screw for stand installation (x 8)	External speaker (x 2)	M3 screw for speaker installation (x 6)

Parts Name and Functions

Control Panel

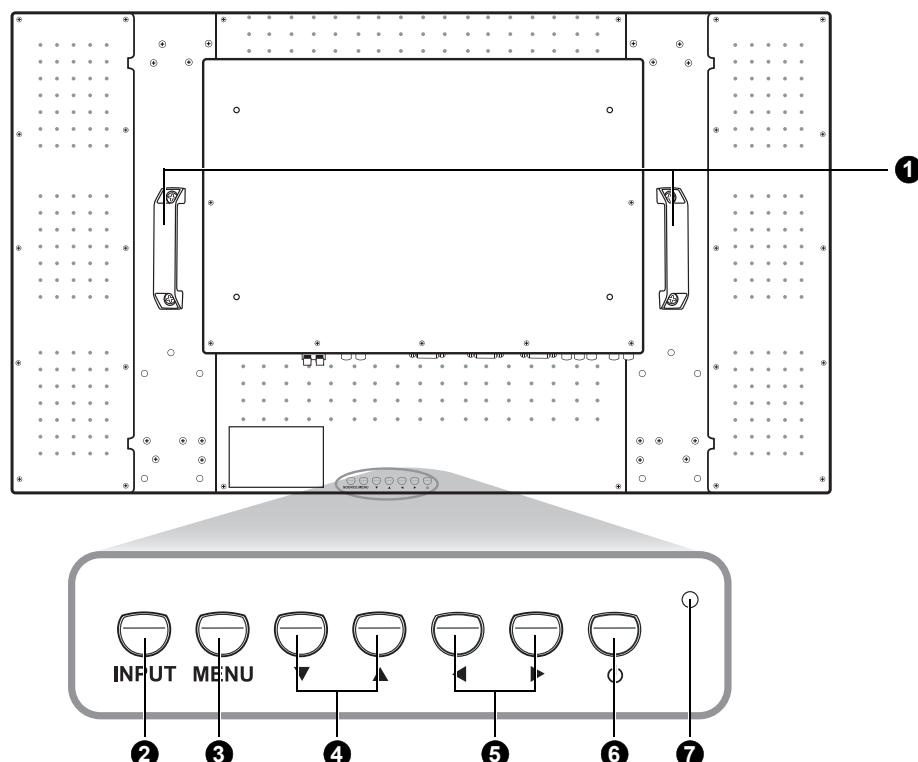


- ❶ Carrying handles** - Use these handles to carry the LCD monitor while installing.
- ❷ INPUT button** - Press this button to select an input source. Acts as SET button with OSD menu.
- ❸ MENU button** - Activates the OSD menu when the OSD menu is turned-off. Acts as EXIT button to move to previous menu with OSD menu.
- ❹ ▲/▼ button** - Moves the selection highlight up or down in the OSD menu.
- ❺ ◀/▶ button** - Moves the selection highlight left or right in the OSD menu.
- ❻ POWER button (⏻)** - Switches the power on/off.
- ❼ Power indicator** - Glows green when the LCD monitor power is ON. Blinks red when the LCD monitor is in the standby mode. Glows red when the LCD monitor power is OFF.

Control Button Lock Function

To activate/deactivate these lock functions....	Press these buttons...	Description
Button lock	Press and hold the ◀ and ▶ buttons simultaneously for 5 seconds.	Locks/unlocks all control buttons except the POWER button (⏻).
Menu lock	Press and hold the ▲ and ▼ buttons simultaneously for 5 seconds.	Locks/unlocks the MENU button.
Power lock	Press and hold the MENU and ▶ buttons for 5 seconds.	- Locks/unlocks the POWER button (⏻). - Keeps power status after re-plugging the power cord.
IR lock	Press and hold the MENU and ◀ buttons for 5 seconds.	Locks/unlocks the wireless remote control function.

Terminal Panel

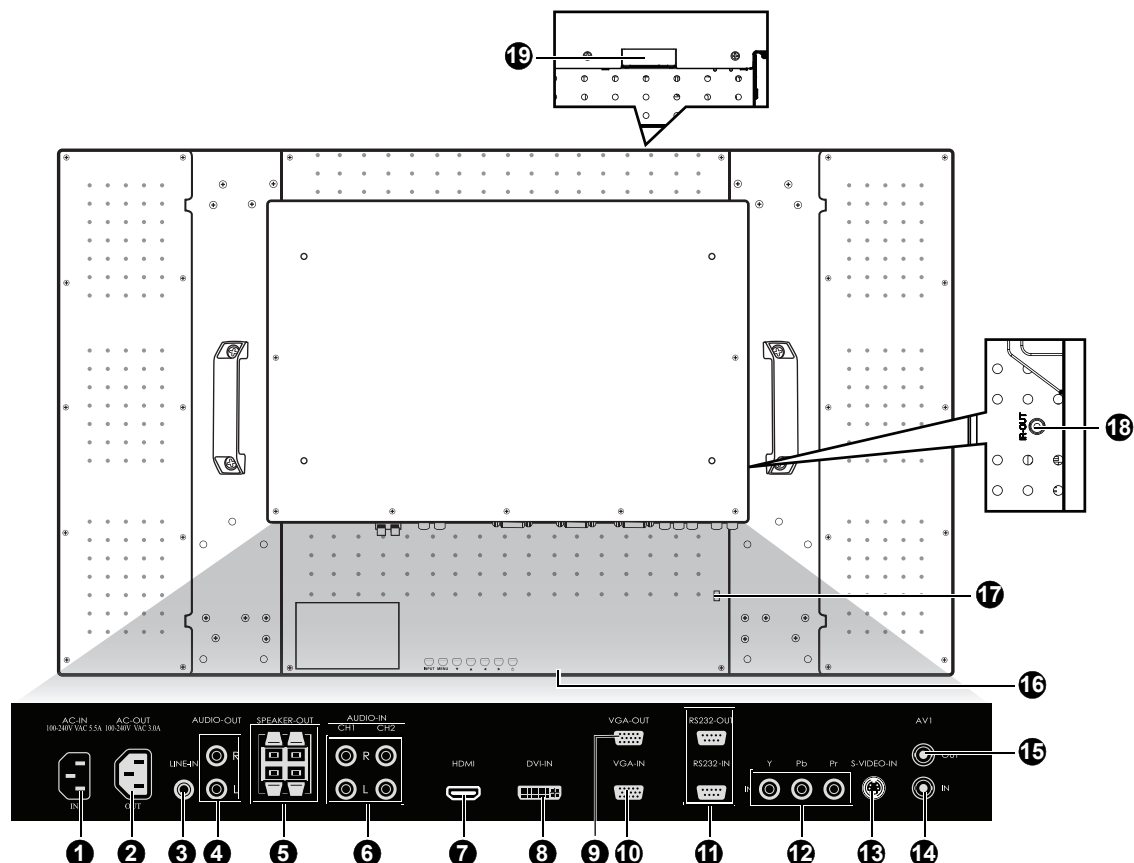

❶ AC-IN (100-240VAC, 5.5A)

Connects to the supplied power cord.

❷ AC-OUT (100-240VAC, 3.0A)

Outputs AC power to another CD4232 monitor.

❸ LINE-IN

To input audio signals from external equipment such as a computer.

❹ AUDIO-OUT

To output audio signals from the LINE-IN, AUDIO-IN or HDMI jacks.

❺ SPEAKER-OUT (8 Ω , 12W x 2)

To output audio signals for external speakers from the LINE-IN, AUDIO-IN or HDMI jacks.

❻ AUDIO-IN R/L (CH1/CH2)

To input audio signals from external equipment such as a VCR or DVD player.

❼ HDMI

To input digital RGB signals from a computer.
* This connector does not support analog input. Audio is supported via HDMI.

❽ DVI-IN

To input digital RGB signals from a computer.
*This connector does not support audio input. The audio signal should be connected to the LINE-IN jack.

❾ VGA-OUT (mini D-Sub 15 pin)

To output signals from VGA-IN.

❿ VGA-IN (mini D-Sub 15 pin)

To input analog RGB signals from a computer or other RGB equipment.

⓫ External control (mini D-Sub 9 pin)

Connects to the RS-232 output connector of a computer, or the RS232-OUT connector of a multi-connected CD4232 monitor. Connect the RS232-OUT connector to the RS232-IN connector of another CD4232 monitor.

⓬ Y Pb Pr IN

Connects to equipment such as a DVD player, HDTV device or Laser disc player.

⓭ S-VIDEO-IN

Connects to equipment such as a VCR or DVD player.

⓮ AV1 IN (BNC type connector)

Connects to equipment such as a VCR or DVD player.

⓯ AV1 OUT (BNC type connector)

To output signals from AV1 IN.

⓰ Remote control sensor

Receives the signal from the wireless remote control.

⓱ Kensington lock hole

For installing a Kensington-type security lock.


⓲ IR OUT

When connected to another device with IR input, it relays the remote control commands from the LCD monitor to the device.

⓳ Ambient light sensor

Automatically detects ambient lighting condition and adjusts screen brightness.

Wireless Remote Control

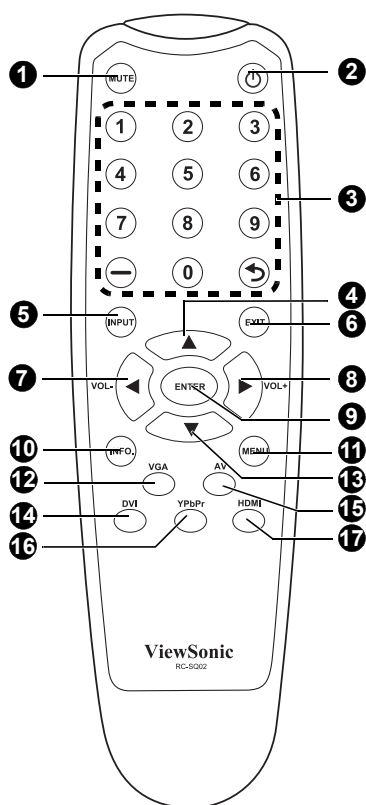

❶ MUTE button

To switch the mute function on/off.

❷ Power button

Switches the power on/off.

*If the Power indicator on the monitor is not glowing, then no controls will work.

❸ Number buttons

These buttons are not used and do not work.

❹ UP button

Acts as ▲ button to move the highlighted area up to select the adjustment with OSD menu.

❺ INPUT button

Selects from input signal: [AV], [S-Video], [VGA], [YPbPr], [DVI] and [HDMI].

❻ EXIT button

Turns to previous menu with OSD menu.

❼ ◀ /Volume - button

- Decreases the audio output level.
- Acts as ◀ button to move the highlighted area left to select the adjustment with OSD menu.

❽ ▶ /Volume + button

- Increases the audio output level.
- Acts as ▶ button to move the highlighted area right to select the adjustment with OSD menu.

❾ ENTER button

Acts as SET button with OSD menu.

❿ Information button

Displays information about the current status of the monitor.

⓫ MENU button

Displays or hides the OSD menu.

⓬ VGA button

Selects VGA as the input signal.

⓭ DOWN button

Acts as ▼ button to move the highlighted area down to select the adjustment with OSD menu.

⓮ DVI button

Selects DVI as the input signal.

⓯ AV button

Selects AV as the input signal.

⓰ YPbPr button

Selects YPbPr as the input signal.


⓱ HDMI button

Selects HDMI as the input signal.

Installing the Remote Control Batteries

The remote control is powered by 1.5V AAA batteries. To install or replace batteries:

1. Press and slide to open the cover.
2. Align the batteries according to the (+) and (-) indications inside the case.
3. Replace the cover.

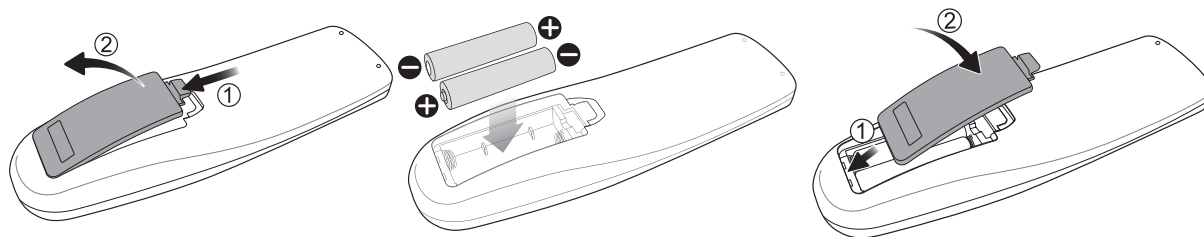

CAUTION:

Incorrect use of batteries can result in leaks or bursting. Be careful especially about the following points.

- Place "AAA" batteries matching the + and - signs on each battery to the + and - signs of the battery compartment.
- Do not mix battery types.
- Do not combine new batteries with used ones. It causes shorter battery life or leakage of batteries.
- Remove dead batteries immediately to prevent battery liquid from leaking into the battery compartment. Don't touch exposed battery acid, it cause damage to your skin.

NOTE:

If you do not intend to use the Remote Control for a long period, remove the batteries.

Operating Range for the Remote Control


Point the top of the remote control toward the LCD monitor's remote sensor during button operation. Use the remote control within a distance of about 7 m/23 ft. from the front of the LCD monitor's remote control sensor and at a horizontal and vertical angle of within 15°.

CAUTION:

Important, the remote control system may not function when direct sunlight or strong illumination strikes the remote control sensor of the LCD monitor, or when there is an object in the path.

Handling the remote control

- Do not subject to strong shock.
- Do not allow water or other liquid to splash the remote control. If the remote control gets wet, wipe it dry immediately.
- Avoid exposure to heat and steam.
- Other than to install the batteries, do not open the remote.

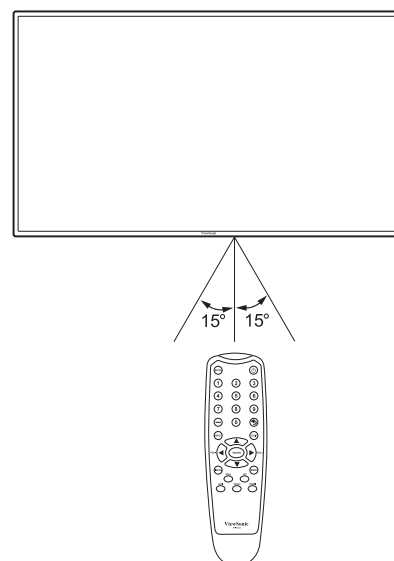

Setup Procedure

1. Determine the installation location

CAUTION: DO NOT ATTEMPT TO INSTALL THE LCD MONITOR BY YOURSELF. Installation of your LCD monitor must be done by a qualified technician. Contact your dealer for more information.

CAUTION: MOVING OR INSTALLING THE LCD MONITOR MUST BE DONE BY TWO OR MORE PEOPLE. Failure to follow this caution may result in injury if the LCD monitor falls.

CAUTION: Do not mount or operate the monitor upside down, face up, or face down.

CAUTION: Do not install the LCD monitor where it will be exposed to direct sunlight, as this will result in display defects.

IMPORTANT:

Lay the protective sheet, which was wrapped around the LCD monitor when it was packaged, beneath the LCD monitor so as not to scratch the panel.

2. Connect external equipment

To protect the connected equipment, turn off the main power before making connections.


Refer to your equipment user manual.

3. Connect the supplied power cord

The power outlet socket should be installed as near to the equipment as possible, and should be easily accessible. Fully insert the prongs into the power outlet socket. Loose connection may cause noise.

NOTE:

- Please refer to "Safety Precautions, Maintenance & Recommended Use" section of this manual for proper selection of AC power cord.
- This LCD monitor has no power switch. When installing the LCD monitor, incorporate a readily accessible disconnect device in the fixed wiring, or connect the power cord to socket-outlet which must be provided near the LCD monitor and easily accessible. If a fault should occur during operation of the unit, operate the disconnect device to switch the power supply off, or disconnect the power cord.

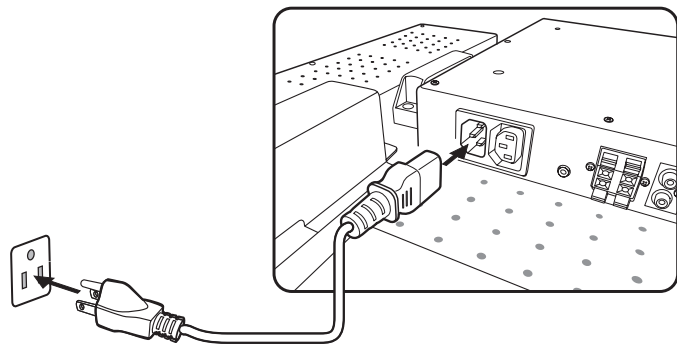

4. Switch on the power of all the attached external equipment

When connected to a computer, switch on the power of the computer first.

5. Operate the attached external equipment

Display the signal on the external equipment you wish.

6. Adjust the sound

Make adjustments lowering or raising the volume as required.

7. Adjust the screen

Make adjustments to the display position or settings if required.

8. Adjust the image

Make adjustments to brightness or contrast if required.

9. Recommended Adjustment

To reduce the risk of "image persistence", please adjust the following items based on the application being used: "Power save" and "Image retention".

10. When CD4232 is installed in portrait position

Conditions

CD4232 can be installed in portrait position, under the following conditions:

Caution:

- Portrait position is effective only when wall-mounted or ceiling-mounted.
- The stands (legs) can not be fitted to the monitor in portrait position.


- Placing the monitor in portrait position, will shorten the average life of the LCD backlight.
- Operational Environment (Temperature) shall be limited, as shown below:

Operational Environment	Temperature	5 - 35 °C / 41 - 95 °F
	Humidity	20 - 80% (without condensation)




Please orientate the monitor in the direction shown below:
Do not place monitor in landscape in any other manner.

How to set-up

1. Remove the stands (legs) if attached.
2. The ViewSonic logo should be on the RIGHT side when facing the monitor.

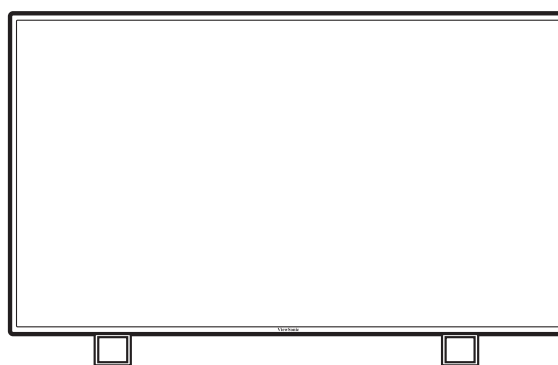


Remove the stands (legs)

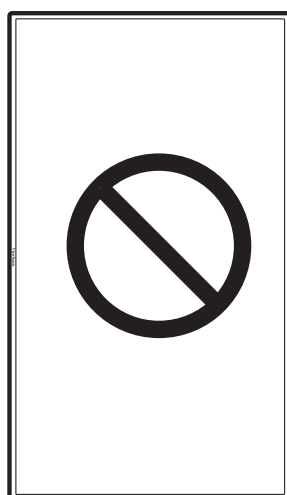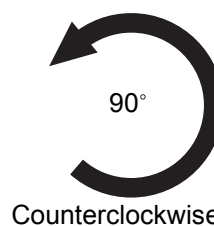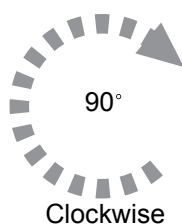

How to Mount and Attach Options to the LCD Monitor


Lay the protective sheet on a table, which was wrapped around the monitor when it was packaged, beneath the screen surface so as not to scratch the screen face.

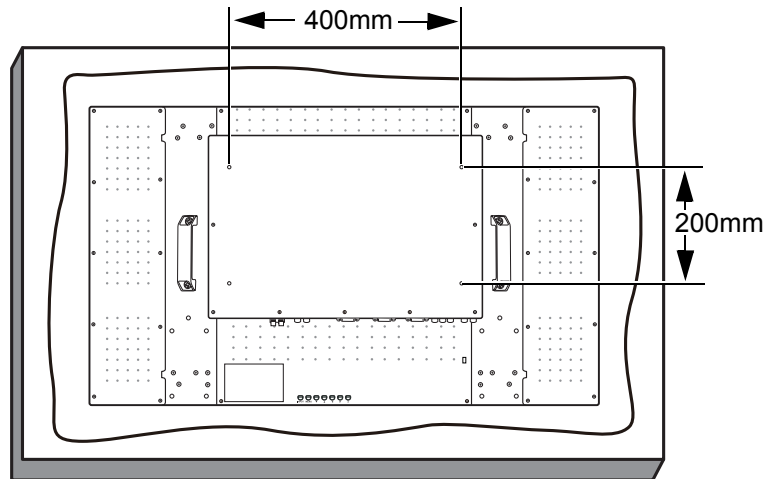

This device cannot be used or installed without the Tabletop Stand or other mounting accessory. Failure to follow correct mounting procedures could result in damage to the equipment or injury to the user or installer. Product warranty does not cover damage caused by improper installation.

Failure to follow these recommendations could result in voiding your warranty.

Use M6 mounting screws (having a length 10-15mm longer than the thickness of the mounting bracket) and tighten them securely. (Recommended torque: 470 - 635N•cm). The mounting interface should comply with the UL1678 standard in North America. The mounting means should strong enough to bear the weight of the monitor (approx. 23.6kg without stand). ViewSonic recommends using mounting interface that comply with TÜV-GS standard.

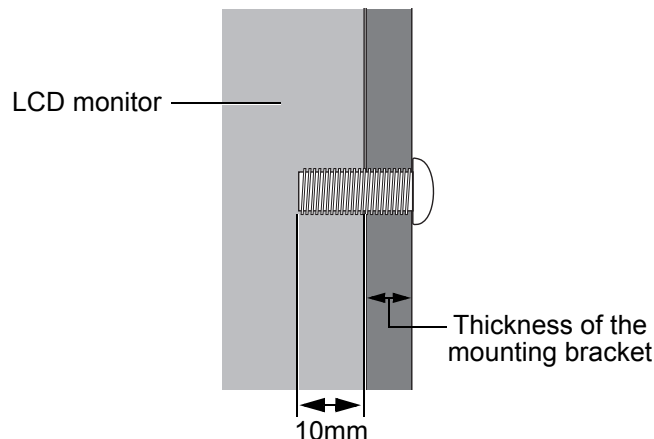


Caution:

For preventing the monitor from falling.

- Install the monitor with metal brackets for wall or ceiling installation (commercially available) on your own responsibility. For detailed procedures of installation, refer to the instructions of the metal brackets.
- To lessen the probability of injury and damage resulting from fall of the monitor in case of earthquake or other disaster, be sure to consult the bracket manufacturer for installation location.
- To lessen the risk of falling of the monitor, thread commercially available rope (having a load capacity at least 1960N (200kgf)) through the handles at the right and left of the monitor and secure the rope to the wall mount brackets or ceiling mount brackets.
- Do not sleep where the monitor may topple over or fall in case of an earthquake or other disaster.

Ventilation Requirements for enclosure mounting


To allow heat to disperse, leave space between surrounding objects as shown in the diagram below.

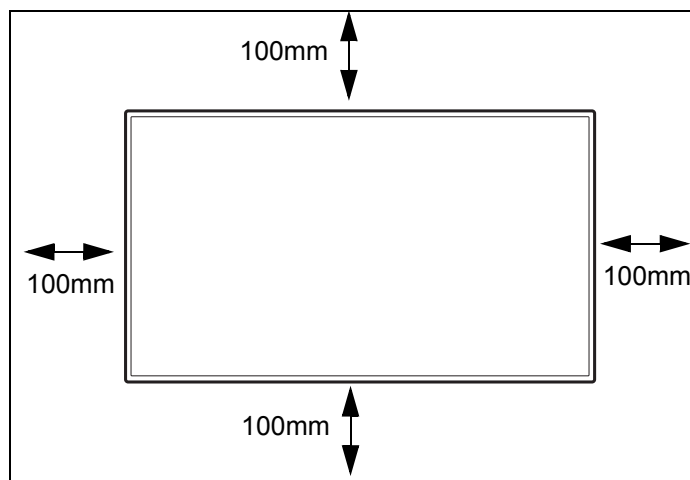

To avoid monitor from falling

Take measures to prevent the monitor from falling over in case of an earthquake or other disaster to lessen the probability of injury and damage resulting from fall.

As shown in the figure, secure the monitor to a solid wall or pillar using rope (commercially available) strong enough to bear the weight of the monitor. (CD4232: approx. 28kg with stand) When you use screw hooks (commercially available), ring screw hooks, not C-shaped screw hooks (with opening), are recommended.

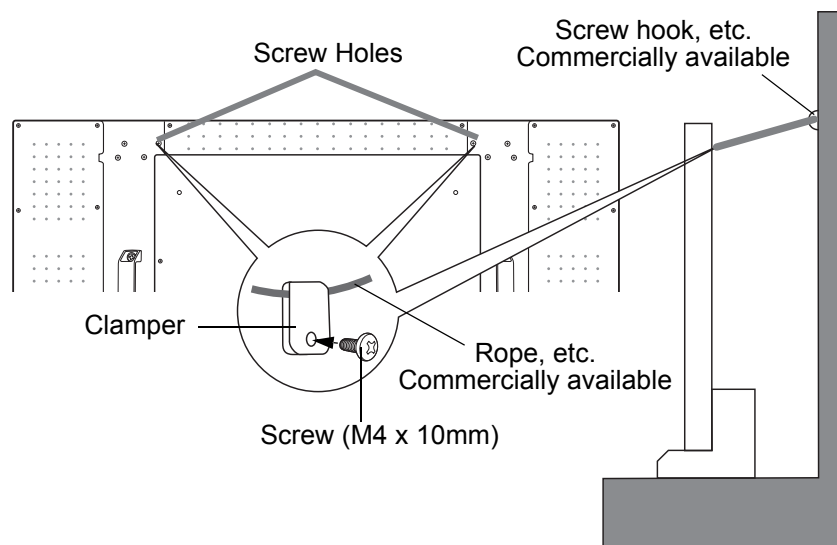

* Clamper and screws are not supplied

Caution:


- The effectiveness of preventing from falling substantially depends on the strength of brackets and base to which prevention device from falling is attached. When you cannot ensure sufficient strength, provide adequate reinforcement.
- Though the recommended prevention from falling is intended to lessen the probability of injury and damage, it doesn't assure its effectiveness against any kind of earthquake or disaster.
- Do not sleep where the monitor may topple over or fall in case of an earthquake or other disaster.
- Before moving the monitor, remove the rope that is securing the monitor. Failure to do so may result in injury or breakdown of the monitor.

Connections

Before making connections:

- First turn off the power of all the attached equipment and make connections.
- Refer to the user manual included with each separate piece of equipment.

Wiring Diagram

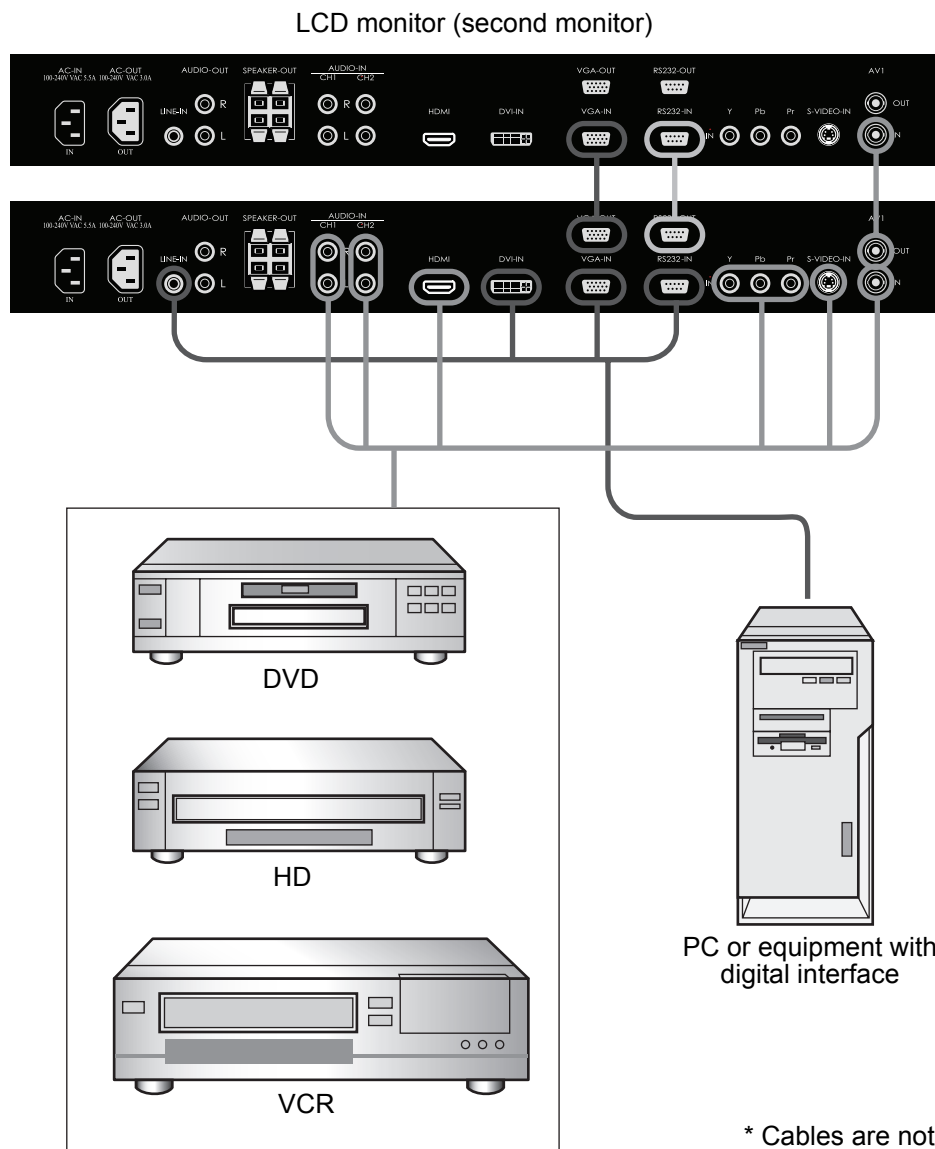


Connecting a Personal Computer

Connecting your computer to your LCD monitor will enable you to display your computer's screen image. Some video cards may not display an image correctly.

Connect the LCD Monitor to a Personal Computer

- To connect the VGA-IN connector (mini D-sub 15 pin) on the LCD monitor, use a PC - Video RGB signal cable (mini D-sub 15 pin to mini D-sub 15 pin).
- When connecting one or more LCD monitors, use the VGA-OUT connector (mini D-sub 15 pin).
- The LINE-IN jack can be used for audio input.
- The SPEAKER-OUT jack outputs sound from the selected Audio input.

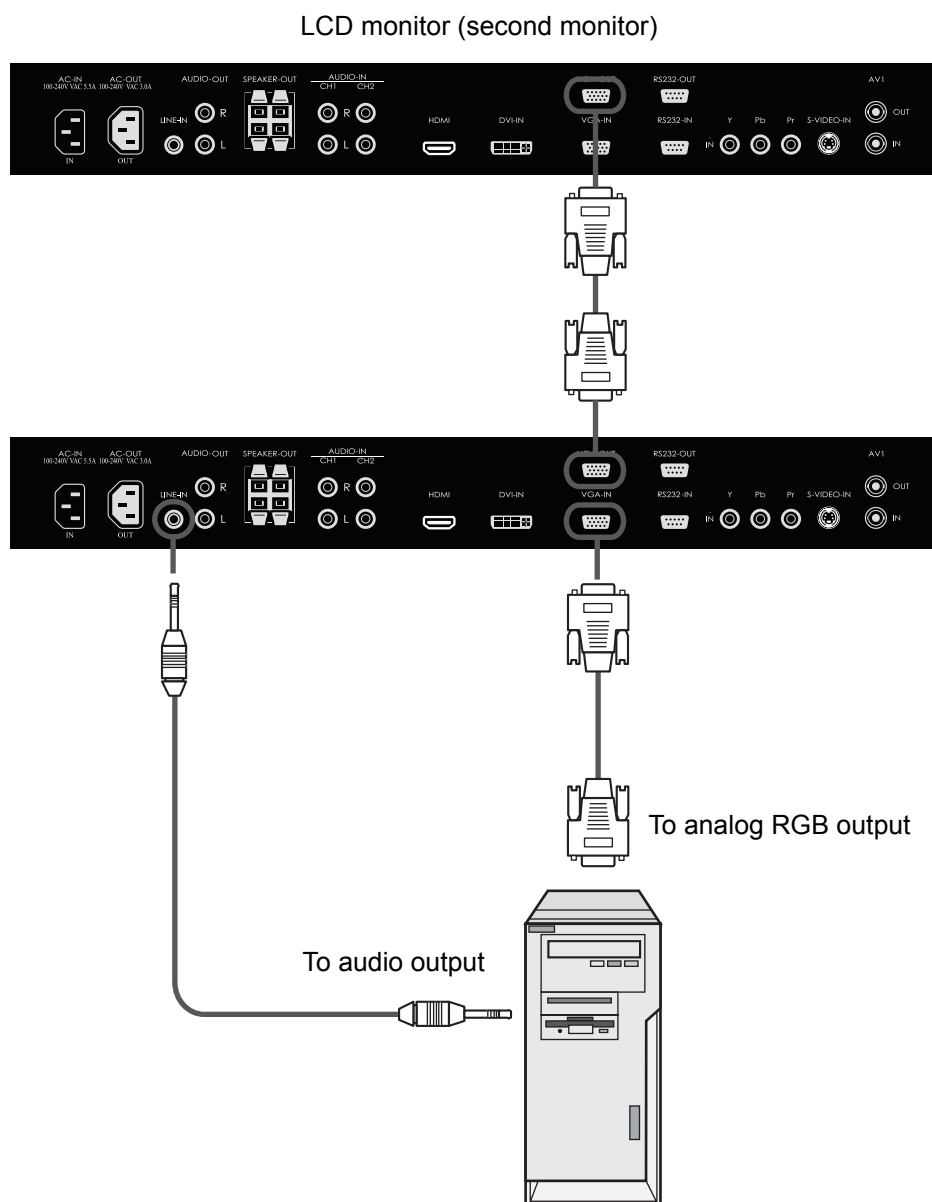


* Cables are not supplied

Connecting with Digital Interface Equipment

Connections can be made with equipment that is equipped with a digital interface compliant with the DVI (Digital Visual Interface) standard.

Connect the LCD Monitor to a Computer with a Digital Output

- The HDMI connector accepts a HDMI cable or a DVI-D to HDMI cable.
- The HDMI connector can connect to HDMI output or DVI-D output of PC.
- To maintain display quality, use a cable with a quality prescribed by HDMI and DVI standards.
- The LINE-IN jack can be used for audio input.
- The signal input from HDMI connector cannot be output to the VGA-OUT connector.

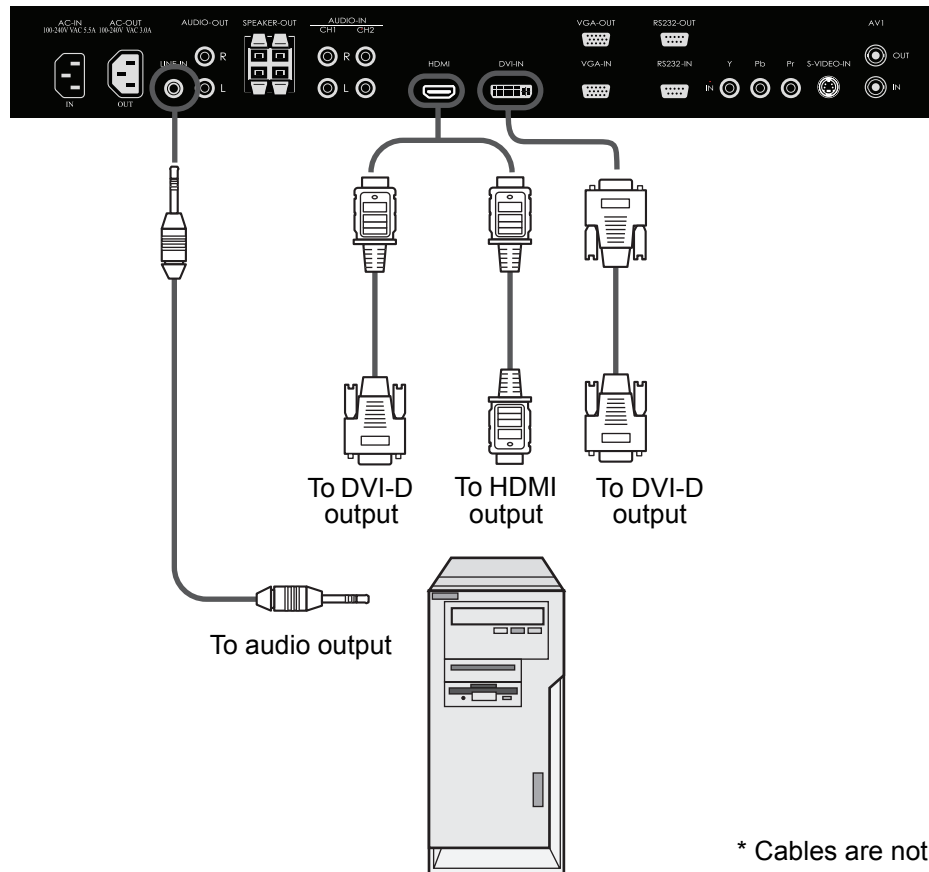


* Cables are not supplied

Connecting a DVD Player with component output

Connecting your DVD player to your LCD monitor will enable you to display DVD video. Refer to your DVD player owner's manual for more information.

Connect the LCD Monitor to a DVD Player

- Connect the Y Pb Pr IN jacks of the LCD monitor to the Y Pb Pr output of the DVD player. Alternatively, you can also use a HDMI cable to connect the HDMI jack of the LCD monitor to the HDMI output of the DVD player.
- The AUDIO-IN jacks can be used for audio input. Do not reverse the audio left and right jacks.

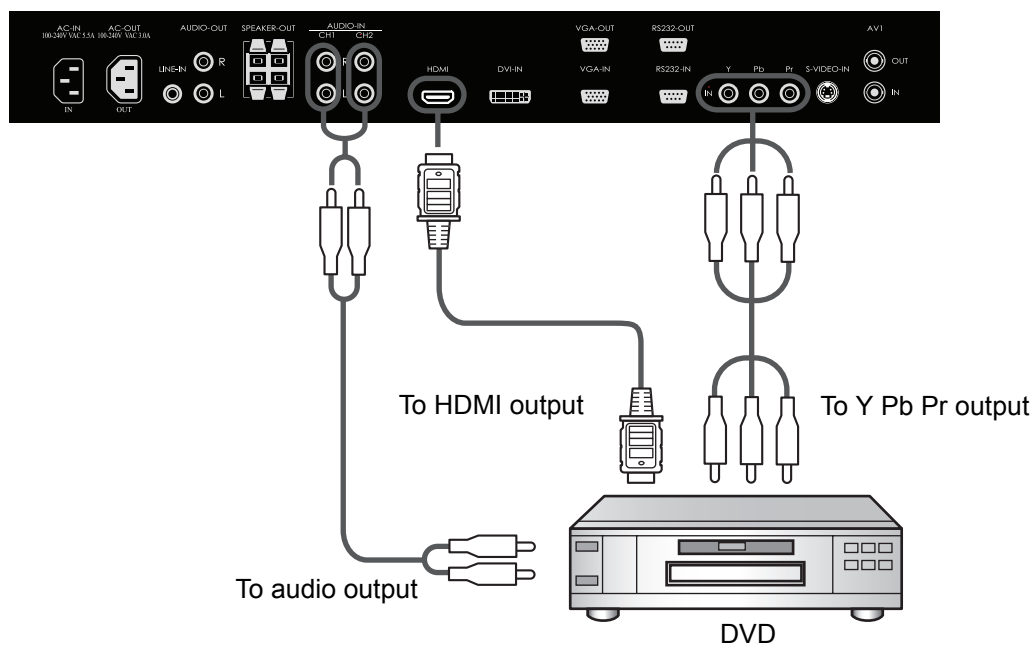


* Cables are not supplied

Connecting a VCR with composite (CVBS) and S-Video outputs

Connecting your VCR to your LCD monitor will enable you to display video from the VCR. Refer to your VCR owner's manual for more information.

Connect the LCD Monitor to a VCR

- Connect the AV1 IN jack of the LCD monitor to the composite (AV) output of the VCR. Alternatively, you can also use an S-Video cable to connect the S-VIDEO-IN jack of the LCD monitor to the S-Video output of the VCR.
- The AUDIO-IN jacks can be used for audio input. Do not reverse the audio left and right jacks.

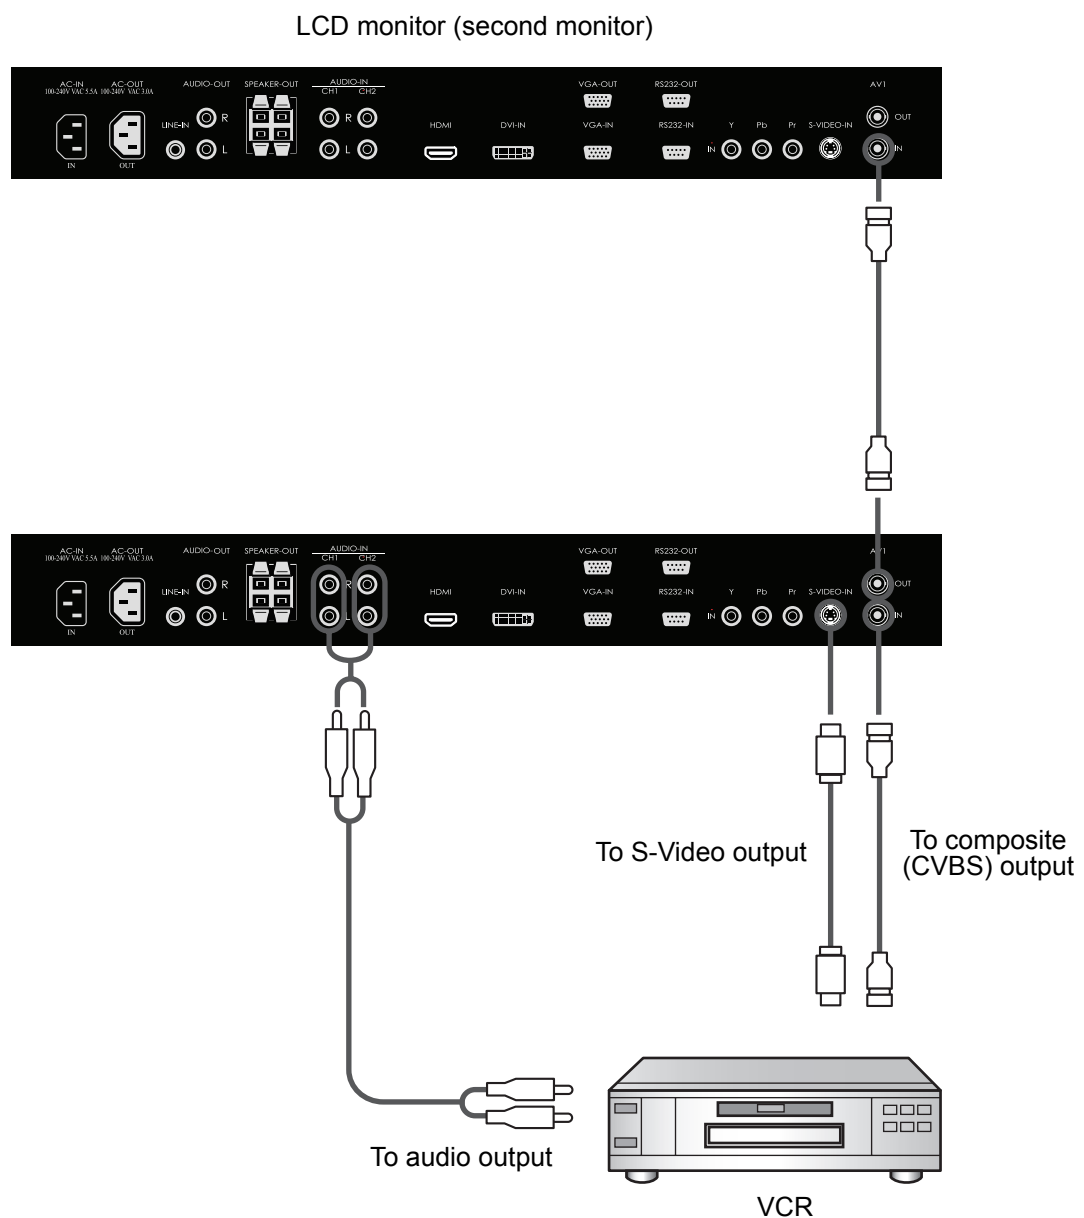


* Cables are not supplied

Connecting to External Speakers

This LCD monitor has a built-in 12W +12W amplifier, so you can connect your external speakers to the LCD monitor directly. Refer to your external speakers' owner's manual for more information.

Connect the LCD Monitor to External Speakers


- Connect the lead wires of the external speakers to the SPEAKER-OUT jacks of the LCD monitor. Do not reverse the audio left and right jacks.

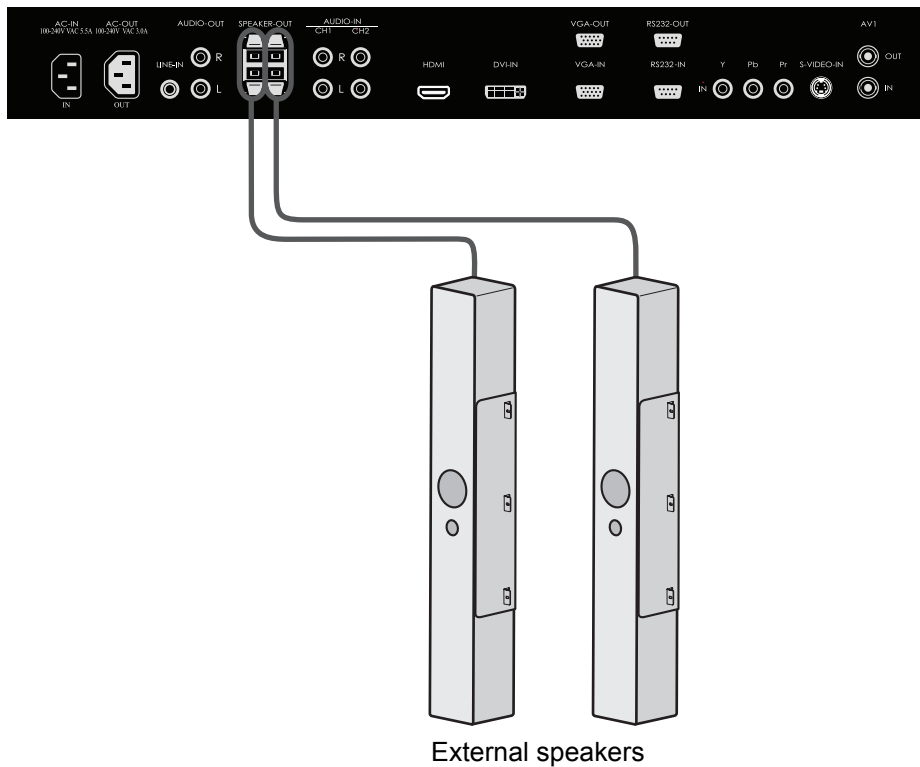

Basic Operation

Power ON and OFF Modes


The LCD monitor power indicator will turn green while powered on or red in off mode. The monitor can be powered on or off using the following two options:

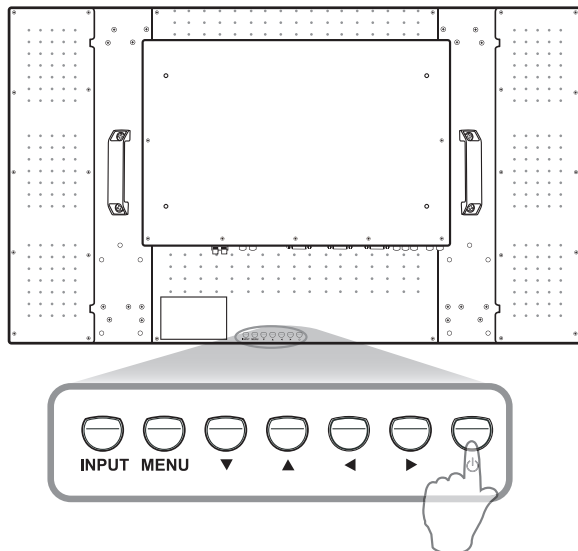

1. Pressing the power button.

NOTE:

Before pressing the power button, be sure to connect the supplied power cord to the LCD monitor.

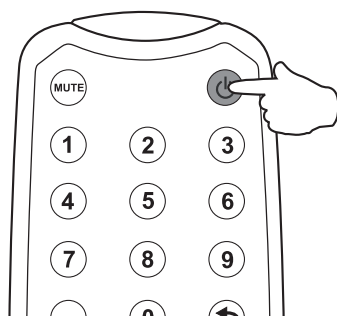

2. Using the remote control.

NOTE:

Before operating the remote control, be sure to connect the supplied power cord to the LCD monitor.

Power Indicator

Status	Color
Power ON	Green
Power OFF	Red
Power Standby	Flashing red

Using Power Management

The LCD monitor follows the VESA approved DPM Power Management function.

The power management function is an energy saving function that automatically reduces the power consumption of the monitor when the keyboard or the mouse has not been used for a fixed period.

The power management feature on your new monitor has been set to the "ON" mode. This allows your monitor to enter a Power Saving Mode when no signal is applied. This could potentially increase the life and decrease the power consumption of the monitor.

Selecting a video source

Normally the CD4232 LCD monitor automatically searches for available video sources after it is turned on. You can also manually select one if multiple video sources are connected to the LCD monitor.

To select a video source using the control panel:


1. Press the **INPUT** button on the control panel to display the Input Source menu.
2. Press the **INPUT** button several times, or press the ▲ or ▼ button to select an input source.

To select a video source using the wireless remote control:

1. Press the **INPUT** button on the remote control to display the Input Source menu.
2. Press the **INPUT** button several times, or press the ▲ or ▼ button on the remote control to select an input source.


You can also press the **AV**, **VGA**, **DVI**, **HDMI** or **YPbPr** button according to the video source you wish to view.

Picture Mode




OSD (On-Screen-Display) Controls


Remote Control

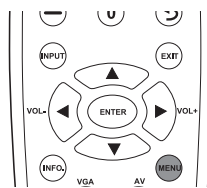


1. Press the **MENU** button to open Main menu.

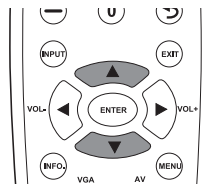


2. Press **▲** or **▼** button to select sub-menu.

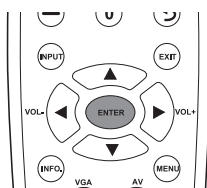

3. Press **ENTER** to decide.

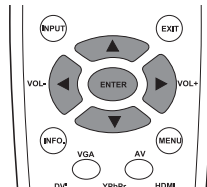


4. Press **▲** or **▼** button to select function, or control which you like, and press **◀** or **▶** to adjust, or press **ENTER** button to decide.

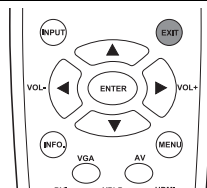

5. Press **EXIT** button to exit.

Control Panel

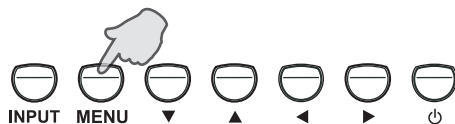


1. Press **MENU** button to open Main menu.



2. Press **▲** or **▼** button to select sub-menu.



3. Press **INPUT** button to decide.

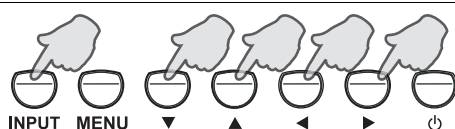


4. Press **▲** or **▼** button to select function, or control which you like, and press **◀** or **▶** to adjust, or press **INPUT** button to decide.



5. Press **MENU** button to exit.

Picture

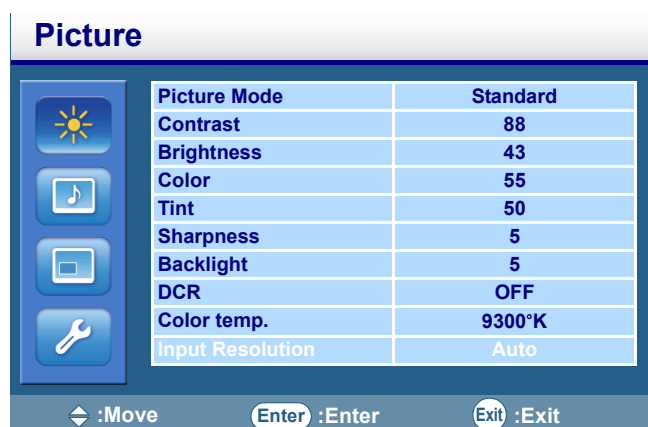

Picture Mode

- Allows you to choose from the following preset picture modes: **Standard**, **Vivid**, **Cinema** and **User**.
- Press **ENTER**, and then ▲ or ▼ button to change selection.

Contrast

- Adjusts the image brightness in relation to the input signal.
- Press ► button to increase contrast, or ◀ button to decrease contrast.

Brightness

- Adjusts the image brightness in relation to the background.
- Press ► button to increase brightness, or ◀ button to decrease brightness.

Color

- Adjusts the image color intensity.
- Press ► button to increase color intensity, or ◀ button to decrease color intensity.

Note: This item is not available for the VGA and DVI inputs.

Tint

- Adjusts the image color tint.
- Press ► button to change the color to a greenish tone, or ◀ button to change the color to a purplish tone.

Note: This item is not available for the VGA and DVI inputs.

Sharpness

- This function is digitally capable to keep crisp image at any timings. It is adjustable to get a distinct image or a soft one as you prefer and set independently for each picture mode.
- Press ► button to increase sharpness, or ◀ button to decrease sharpness.

Backlight

- Adjusts the backlight intensity of the LCD screen.
- Press ► button to increase backlight intensity, or ◀ button to decrease backlight intensity.

Note: This item is not available if the Ambient Light Sensor function is set to HIGH or LOW.

DCR (Dynamic Contrast Ratio)

- When turned on, this function helps enhance image contrast when displaying dark scenes.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.

Note: This item is not available if the Ambient Light Sensor function is set to HIGH or LOW.

Color temp.


- Use to choose a color temperature.
- Press **ENTER**, and then ▲ or ▼ button to select **12000°K**, **9300°K**, **6500°K**, **5800°K** or **User**.
- If **User** is selected, you can adjust the **Red**, **Green** and **Blue** settings separately.

Input Resolution

Note: This item is only available for the VGA input.

- Set the resolution of the VGA input. This is only required when the monitor is unable to detect the VGA input resolution correctly.
- Press **ENTER**, and then ▲ or ▼ button to select **1366x768**, **1360x768**, **1280x768** or **Auto**.

Sound

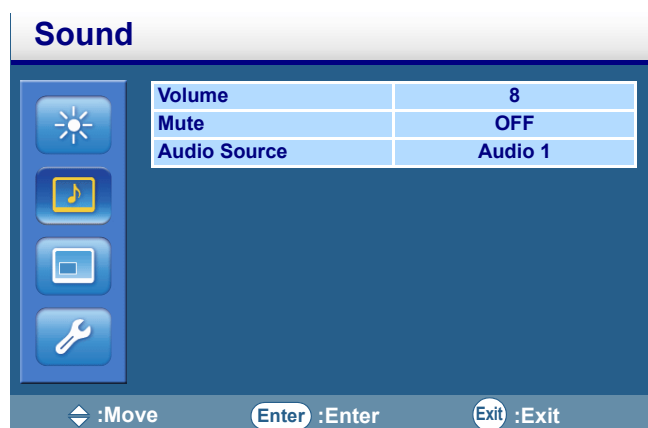

Volume


- Adjusts the audio volume.
- Press ► button to increase volume, or ◀ button to decrease volume.

Mute

- Turns audio off temporarily.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.


Audio Source

- Selects the audio input source. You can use this function to select an audio input source from **Audio 1** (from the AUDIO-IN R/L CH1 jacks), **Audio 2** (from the AUDIO-IN R/L CH2 jacks), **Line-in** (from the LINE-IN jack) or **HDMI** (from the HDMI jack, only available when HDMI signal is detected).

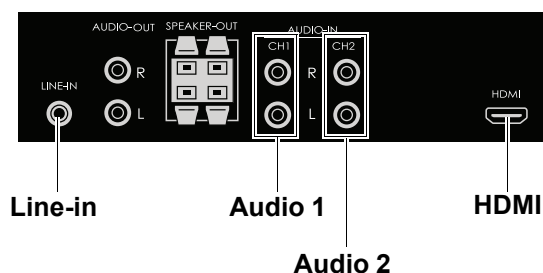

- Press **ENTER**, and then ▲ or ▼ button to change selection.

Option

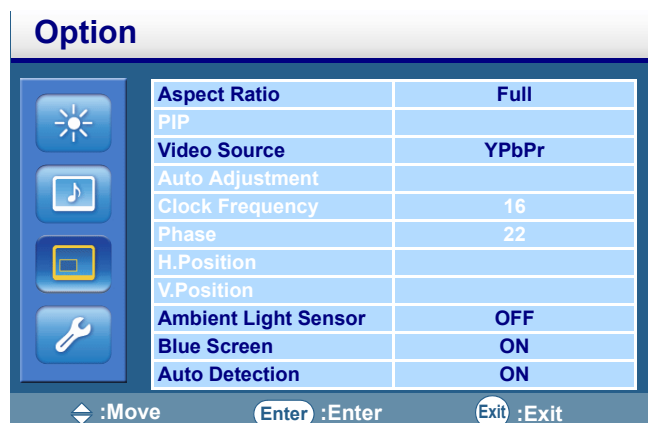


Aspect ratio

- With this function, you can choose to let the LCD monitor display the input image in its original aspect ratio (when **Original** is selected), or force the LCD monitor to fill the input image on the entire display area (when **Full** is selected).
- Press **ENTER**, and then ▲ or ▼ button to change selection.

PIP (Picture in Picture)

Note: This item is not available for the AV and S-Video inputs.

- Press **ENTER** to display the sub-menu:

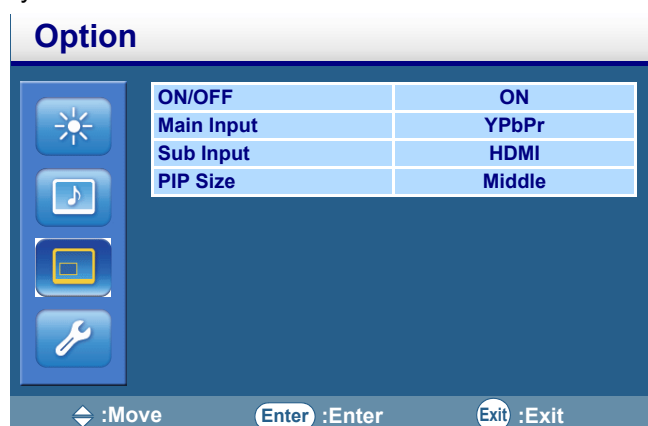

- **ON/OFF:** Turns on or off the PIP function of this LCD monitor. Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.
- **Main Input:** Selects the input source for the main picture. Press **ENTER**, and then ▲ or ▼ button to change selection.
- **Sub Input:** Selects the input source for the sub picture. Press **ENTER**, and then ▲ or ▼ button to change selection.
- **PIP Size:** Changes the size of the sub picture. Press **ENTER**, and then ▲ or ▼ button to change selection.
- The availability of the PIP function is determined by the signal source combination. Please refer to the table below. (○: PIP function available, ×: PIP function unavailable)

		Main picture signal source					
		AV	S-Video	VGA	YPbPr	DVI	HDMI
Sub picture signal source	AV	×	×	×	×	×	×
	S-Video	×	×	×	×	×	×
	VGA	×	×	×	×	○	○
	YPbPr	×	×	×	×	○	○
	DVI	×	×	○	○	×	×
	HDMI	×	×	○	○	×	×

Notes:

- In PIP mode, only the audio from the Main Input picture will be available.
- Refer to page 40 for more information on all supported signal source types and resolutions in PIP mode.

Video Source

- Selects an input source for the LCD monitor to display.
- Press **ENTER**, and then ▲ or ▼ button to change selection.

Auto Adjustment

- Use this function to let the LCD monitor automatically adjust the screen size, horizontal position, vertical position, clock frequency and phase.
- Press **ENTER** button to execute this function.

Note: This item is only available for the VGA input.

Clock Frequency

- Adjusts the clock frequency of the PC or YPbPr input image.
- Press ► button to expand the width of the image on the screen to the right, or ◀ button to narrow the width of the image on the screen to the left.

Note: This item is only available for the VGA and YPbPr inputs.

Phase

- Improves focus, clarity and image stability of PC or YPbPr input image by increasing or decreasing this setting.
- Press ► button to increase the setting, or ◀ button to decrease the setting.

Note: This item is only available for the VGA and YPbPr inputs.

H.Position

- Controls Horizontal Image position of PC input image within the display area of the LCD monitor.
- Press ► button to move the screen image to the right, or ◀ button to move the screen image to the left.

Note: This item is only available for the VGA input.

V.Position

- Controls Vertical Image position of PC input image within the display area of the LCD monitor.
- Press ► button to move the screen image up, or ◀ button to move the screen image down.

Note: This item is only available for the VGA input.

Ambient Light Sensor

- Choose to adjust the sensitivity or disable the ambient light sensor of the monitor.
- Press **ENTER**, and then ▲ or ▼ button to select **OFF**, **HIGH** or **LOW**.


Blue Screen

- Turns on or off the blue screen function. If turned on, a blue screen will be displayed when no input signal is detected by the LCD monitor.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.

Auto Detection

- Choose to let the monitor detect and display available signal sources automatically.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.

Setting

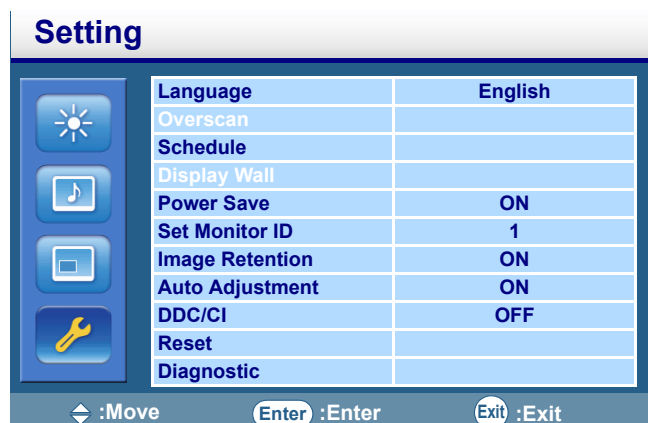

Language

- Allows you to select a preferred language for the OSD menu. **English**, **Français** (French) and **Español** (Spanish) are available for selection.
- Press **ENTER**, and then **▲** or **▼** button to change selection.


Overscan

- Turns on or off the overscan function when displaying HDMI input image.
- Press **ENTER**, and then **▲** or **▼** button to turn this function on or off.

Note: This item is only available for the HDMI input.

Schedule

- Press **ENTER**, and then **▲** or **▼** button to select a function:
 - **Date and Time:** Sets up current date and time. Press **ENTER** to display the sub-menu:

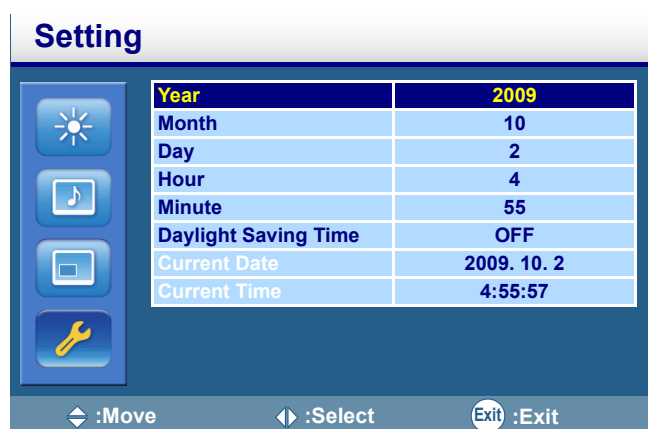

- To set up date and time:
 1. Press **▲** or **▼** button to highlight **Year**, and then press **◀** or **▶** to select a year.
 2. Press **▲** or **▼** button to highlight **Month**, and then press **◀** or **▶** to select a month.
 3. Press **▲** or **▼** button to highlight **Day**, and then press **◀** or **▶** to select a day.
 4. Press **▲** or **▼** button to highlight **Hour**, and then press **◀** or **▶** to set the hour.
 5. Press **▲** or **▼** button to highlight **Minute**, and then press **◀** or **▶** to set the minute.
 6. Press **▲** or **▼** button to highlight **Daylight Saving Time**, press **ENTER**, and then press **▲** or **▼** to select **ON** or **OFF**.
- Once set, the current date and time will display in the **Current Date** and **Current Time** rows.

- **Schedule:** Using the Schedule function allows you to set up to seven different scheduled time intervals when the LCD Monitor will be activated. You can select the time the monitor turns on and turns off, the day of week the monitor is activated, and which input source the monitor will use for each scheduled activation period.

Note: Set up current time first before setting up the Schedule.

- Press **ENTER** to display the sub-menu:

Schedule

Today 2009.10.2 Fri 4:55:57

	On	Off	Input
☒ 1	-- : 00	-- : 00	AV
☐ 2			
☐ 3			
☐ 4			
☐ 5			
☐ 6			
☐ 7			

☐ Every Day
☐ Mon ☐ Tue ☐ Wed ☐ Thu
☐ Fri ☐ Sat ☐ Sun
☐ Every Week

◀ :Move ▶ :Select Enter :Enter Exit :Exit

- To set up a schedule item:
 1. Press **▲** or **▼** button to select a schedule item (item 1 through item 7), and then press **▶** button.
 2. With the **On** item highlighted, press **ENTER** and then press **▲** or **▼** button to set the hour when the LCD monitor will be turned on, then press **▶** button to move to the minute slot to set the minute. If you create a schedule but do not want to use a power on time, select "--" for the hour slot, and "00" for the minute slot.
 3. Press **EXIT**, and then press **▶** button to highlight the **Off** item. Press **ENTER**, and then press **▲** or **▼** button to set the hour when the LCD monitor will be turned off, then press **▶** button to move to the minute slot to set the minute. If you create a schedule but do not want to use a power off time, select "--" for the hour slot, and "00" for the minute slot.
 4. Press **EXIT**, and then press **▶** button to highlight the **Input** item, and then press **▲** or **▼** button to select an input source. If no input source is selected, the input from the previous schedule item will be used.
 5. Press **▶** button to select what days in a week this schedule item will be take effect, and then press **ENTER** button.
 6. If you want to set up more schedule items, press **EXIT** and then repeat the steps above.
- A check mark in the box next to the number of the schedule item indicates that the selected schedule is in effect.


Notes:

- The selection of Every Day within a schedule item takes priority over other schedules that are set up to operate weekly.
- When schedule items overlap, scheduled power on time has priority over scheduled power off time.
- If there are two schedule items programmed for the same time, then the highest numbered schedule has priority.

Display Wall

Note: This item is only available for the VGA input.

- Press **ENTER** button to display the sub-menu:

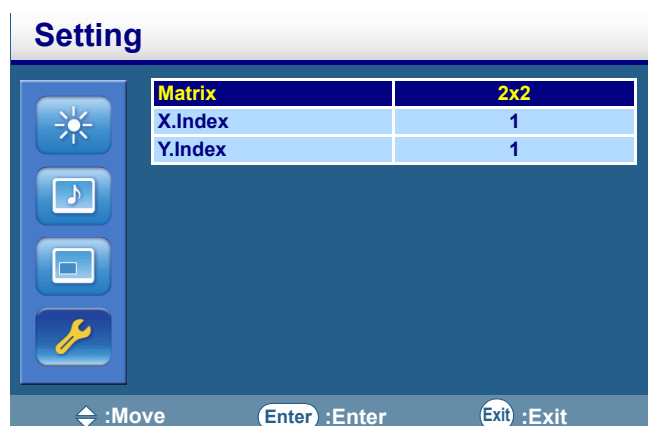

- **Matrix:** Selects the matrix configuration of the display wall. Press **ENTER**, and then ▲ or ▼ button to change selection.
- **X.Index:** Selects the horizontal position of the monitor in the display wall matrix. Press ◀ or ▶ button to change selection.
- **Y.Index:** Selects the vertical position of the monitor in the display wall matrix. Press ◀ or ▶ button to change selection.

Power save

- If turned on, the LCD monitor will go to power management mode when PC sync is lost, and will enter power management mode when no DVD/HD or VIDEO input signal can be detected three times in a row.
- Press **ENTER**, and then press ▲ or ▼ to select **ON**, **OFF** or **VGA only**.

Set Monitor ID

- By connecting multiple LCD monitors to a PC using RS-232C cables, you can control any one monitor or all the monitors on the PC. Assign arbitrary ID number to each of multi-connected CD4232 monitors using this function. ID numbers 1 to 25 are selectable. It is recommended to assign sequential ID numbers from 1 and up.
- Press **ENTER**, and then ▲ or ▼ button to change the ID number.

Image Retention

- If turned on, the LCD monitor automatically displays swift moving patterns to prevent the formation of image retention on the screen.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.

NOTE: IMAGE PERSISTENCE

- Please be aware that LCD Technology may experience a phenomena known as Image Persistence. Image Persistence occurs when residual or "ghost" image of a previous image remains visible on the screen. Unlike CRT monitors, LCD monitors' image persistence is not permanent, but constant images being displayed for a long period of time should be avoided.
- To alleviate image persistence, turn off the monitor for as long as the previous image was displayed. For example, if an image was on the monitor for one hour and a residual image remains, the monitor should be turned off for one hour to erase the image.
- As with all personal display devices, ViewSonic recommends displaying moving images and using a moving screen saver at regular intervals whenever the screen is idle or turning off the monitor when not in use. Please use the Power Save and Schedule functions to further reduce the risk of Image persistence.

Auto Adjustment

- Turns on or off the Auto Adjustment function. Once turned on, the LCD monitor will automatically optimize the image by adjusting the vertical position, horizontal position, clock frequency and phase when the input signal timing is changed.
- Press **ENTER**, and then ▲ or ▼ button to turn this function on or off.

DDC/CI


- Turns on or off the DDC/CI (Display Data Channel/Command Interface) function of the LCD monitor. When this function is turned on and the LCD monitor is connected to a PC, the LCD monitor communicates with the PC and automatically optimizes image display.
- Press **ENTER**, and then **▲** or **▼** button to turn this function on or off.

Reset

- If activated, all OSD settings (except the Language setting) will be restored to the factory settings.
- Press **ENTER** button to activate the reset.

Diagnostic

- Press **ENTER** button to display the diagnostic information of the LCD monitor:

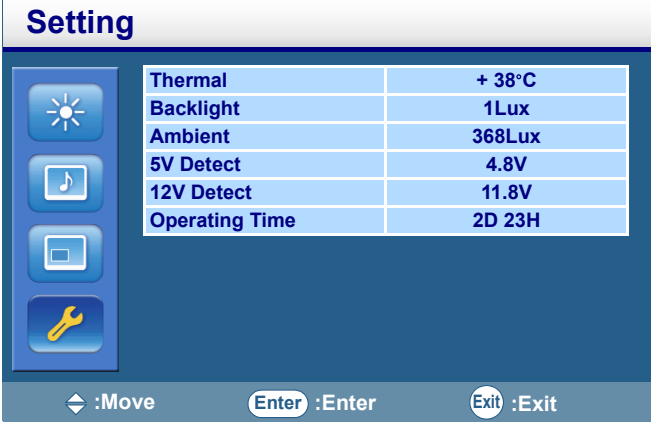

The screenshot shows the 'Setting' menu of the LCD monitor. On the left is a vertical sidebar with four icons: a sun (Brightness), a musical note (Audio), a monitor (Display), and a wrench (Tools/Settings). The main area displays a table of diagnostic data. At the bottom, there is a navigation bar with three buttons: a left arrow labeled ':Move', an 'Enter' button labeled ':Enter', and an 'Exit' button labeled ':Exit'.

Setting	
Thermal	+ 38°C
Backlight	1Lux
Ambient	368Lux
5V Detect	4.8V
12V Detect	11.8V
Operating Time	2D 23H

- **Thermal**: Displays current temperature inside the LCD monitor.
- **Backlight**: Displays current backlight brightness of the LCD monitor.
- **Ambient**: Displays current ambient brightness around the LCD monitor.
- **5V Detect**: Displays current 5V voltage detection result.
- **12V Detect**: Displays current 12V voltage detection result.
- **Operating Time**: Displays the time elapsed since the LCD monitor was last turned on. D=Day, H=Hour.

For Long Life Use of Public Display

< Image Sticking of LCD Panel >

When LCD panel is operated continuously for long hours, a trace of electric charge remains near the electrode inside LCD, and residual or “ghost” image of previous image may be observed. (Image Persistence)

Image Persistence is not permanent, but when fixed image is displayed for long period, ionic impurities inside LCD are accumulated along the displayed image, and it is observed permanently. (Image Sticking)

< Recommendations >

For preventing the fast transition to Image Sticking, and for longer life usage of LCD, following are recommended.


1. Fixed image should not be displayed for long period, and changed to another images with short cycle.
2. When not in use, please turn off the monitor.
3. Reducing the environmental temperature is effective for long life use.

Controlling the LCD monitor via RS-232C Remote Control

This LCD monitor can be controlled by connecting a personal computer with a RS-232C terminal. Functions that can be controlled by a personal computer are:

Connection

LCD Monitor + PC

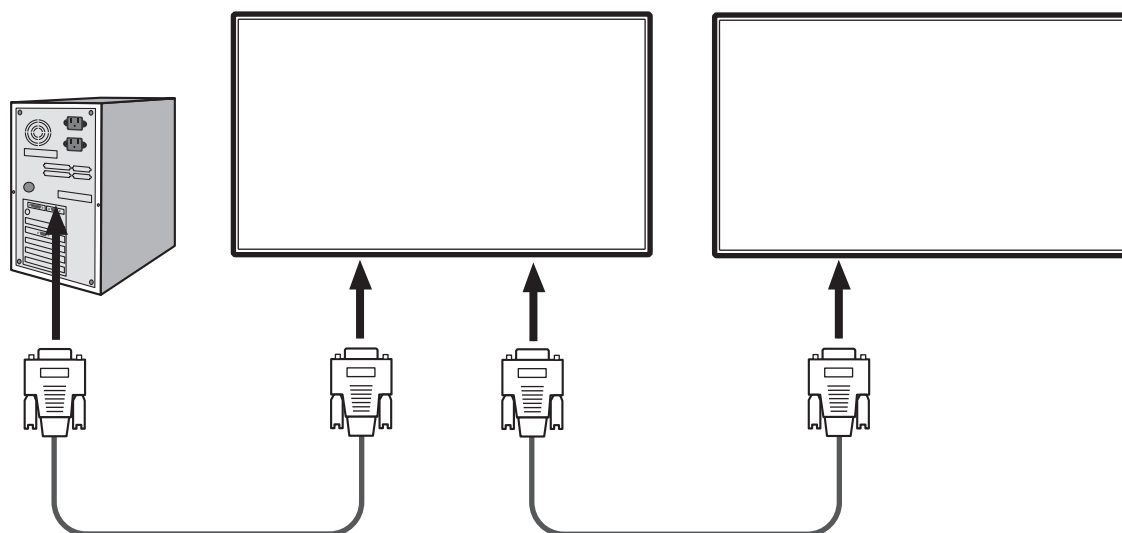

NOTE:


- Two kinds of RS-232 protocols are provided: serial connection and non-serial connection.
- When connecting multiple monitors in a daisy-chain configuration, please refer to the table below for the maximum number of monitors that can be deployed depending on the signal type and resolution used. For example, if you use VGA as the signal type and signal resolution is 800 x 600 @ 60Hz, then you can connect up to 16 monitors in a daisy-chain configuration. It is recommended that you use VGA as the signal type for input/output connection in a daisy-chain configuration.

Resolution	Signal type
	VGA
640 x 480 @ 60Hz	16
640 x 480 @ 72Hz	
640 x 480 @ 75Hz	
720 x 400 @ 70Hz	
800 x 600 @ 60Hz	
800 x 600 @ 75Hz	
1024 x 768 @ 60Hz	12
1024 x 768 @ 75Hz	
1280 x 768 @ 60Hz	
1280 x 960 @ 60Hz	
1280 x 1024 @ 60Hz	
1360 x 768 @ 60Hz	
1366 x 768 @ 60Hz	10
1600 x 1200 @ 60Hz	
1920 x 1080 @ 60Hz	

Appendix: Installing stands

How to install stands


1. Spread the protective sheet on the flat surface, such as a desk. Place monitor on the protective sheet.

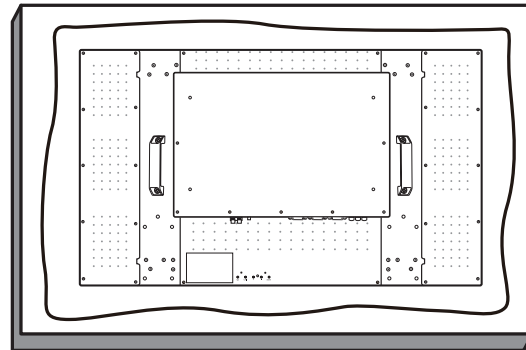



2. Place the stands on the monitor as shown.

NOTE:

Install the stands so that their longer portions come to the front.

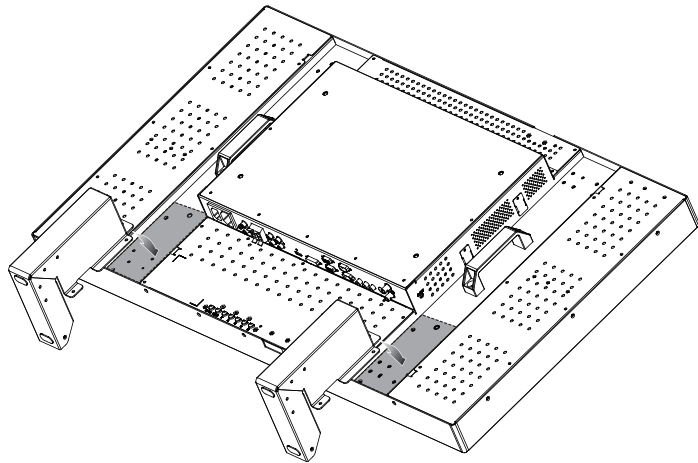

3. Use the M4 and M6 screws and a suitable screwdriver to secure the stands on the LCD monitor.

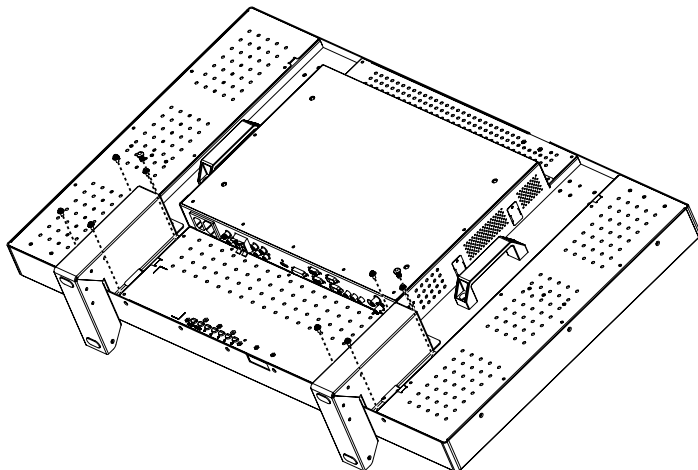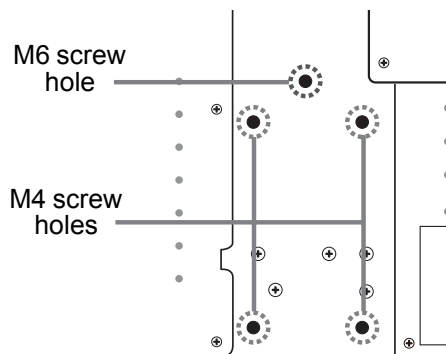

Features

Signage-friendly Design

- Slim bezel for tiled applications
- All metal (aluminum) construction
- Industrial-grade superior reliability
- Fanless design
- VESA mounting compliance with carrying handles
- Various mounting schemes for player carriers

Plug and Play

- The Microsoft® solution with the Windows® 95/98/Me/2000/XP operating system facilitates setup and installation by allowing the monitor to send its capabilities (such as screen size and resolutions supported) directly to your computer, automatically optimizing display performance.

PC-Based Multi-panel Management

- Full-function display controls
- Real-time diagnostics for detecting backlight luminance, voltage and temperature

OSD (On-Screen-Display) Controls

- Allow you to quickly and easily adjust all settings of your screen image via simple to use on-screen menus

Troubleshooting

No picture

- The signal cable should be completely connected to the display card/computer.
- The display card should be completely seated in its slot.
- Monitor and computer power should be switched ON.
- Check to make sure that a supported mode has been selected on the display card or system being used. (Please consult display card or system manual to change graphics mode.)
- Check the monitor and your display card with respect to compatibility and recommended settings.
- Check the signal cable connector for bent or pushed-in pins.
- If nothing is displayed on the screen when HDCP device is connected, reset the power of the device.

The Power button does not respond

- Unplug the power cord of the monitor from the AC outlet to turn off and reset the monitor.

Image persistence

- Please be aware that LCD technology may experience a phenomenon known as Image Persistence. Image Persistence occurs when a residual or “ghost” image of a previous image remains visible on the screen. Unlike CRT monitors, LCD monitors’ image persistence is not permanent, but constant images being displayed for a long period of time should be avoided. To alleviate image persistence, turn off the monitor for as long as the previous image was displayed. For example, if an image was on the monitor for one hour and a residual image remains, the monitor should be turned off for one hour to erase the image.

NOTE:

As with all personal display devices, VIEWSONIC recommends displaying moving images and using a moving screen saver at regular intervals whenever the screen is idle or turning off the monitor when not in use.

Image is unstable, unfocused or swimming is apparent

- Signal cable should be completely attached to the computer.
- Use the OSD controls to focus and adjust display by increasing or decreasing the fine adjustment.
- Check the monitor and your display card with respect to compatibility and recommended signal timings.
- If your text is garbled, change the video mode to non-interlace and use 60 Hz refresh rate.

Image of component signal is greenish

- Check to see if the DVD/HD input connector is selected.

The LED on monitor is not lit (no green or red color can be seen)

- The power cord should be connected.
- Make certain the computer is not in a power-saving mode (touch the keyboard or mouse).

Display image is not sized properly

- Use the OSD Image Adjust controls to increase or decrease the coarse adjustment.
- Check to make sure that a supported mode has been selected on the display card or system being used. (Please consult display card or system manual to change graphics mode.)

No Sound

- Check to see if speaker cable is properly connected.
- Check to see if mute is activated.
- Check to see if volume is set at minimum.

Remote Control is not available

- Check the Remote Control’s batteries status.
- Check if batteries are inserted correctly.
- Check if the Remote Control is pointing at the monitor’s remote sensor.

Stripe Noise

Either light vertical or horizontal stripes may appear, depending on the specific display pattern. This is no product fault or degradation.

Specifications

Product Specifications

Product specifications	Analog Input	Digital Input
LCD Module	Diagonal: 42.02" / 106.73 cm Pixel Pitch: 0.4845 mm Resolution: 1920 x 1080 dots Color: Over 16 million colors (depending on video card used) Brightness: 700 cd/m ² (typ.) Contrast Ratio: 3500:1 (typ.) Response time: 8 ms (typ. G to G) View Angle: Up and Down 178°, Left and Right 178° (typ.) @CR>10 Design View Distance: 1100 mm / 43.34 inches	
Frequency	Horizontal: 31 - 70 KHz Vertical: 50 - 75 Hz	
Pixel Clock	25.2 - 85 MHz	25.2 - 148.5 MHz
Viewable Size	930.24 x 523.26 mm / 36.62 x 20.59 inches	
Input Signal	PC Input: VGA 15 Pin Mini D-sub DVI VIDEO Input: HDMI Y Pb Pr Y Pb Pr (RCA jacks) CVBS Composite Video (BNC jacks) S-Video Y/C (Mini-DIN jack) AUDIO Input: L/R (RCA jacks) L/R (3.5mm Mini-jack) RS-232C: 9 Pin Mini D-sub	DVI-D HDMI with HDCP
Output Signal	PC Output: VGA 15 Pin Mini D-sub VIDEO Output: CVBS Composite Video (BNC jacks) Speaker Output: External Speaker Jack 12W + 12W (8 ohm) Audio Output: L/R (RCA jacks) RS-232C: 9 Pin Mini D-sub	
Resolutions Supported	NTSC, PAL, SECAM, 4.43NTSC, PAL60 480i@60, 576i@50, 480p@60, 576p@50, 1080i@60, 1080i@50, 720p@60, 720p@50, 1080p@60, 1080p@50	
Power Supply	100 - 240 V AC, 50 / 60 Hz	
Power Consumption	Max. 210 W Power Save: Less than 2 W (Standby)	
Operational Environment	Temperature: Landscape: 0 - 40 °C / 32-104°F, Portrait: 5 - 35 °C / 41-95°F Humidity: 20 - 80% (Without condensation)	
Storage Environment	Temperature: -20 - 60°C / -4 - 140°F Humidity: 10 - 90% (Without condensation)	
Dimension	Net without stand: 962.7 mm (W) x 555.4 mm (H) x 109.6 mm (D) / 37.9" (W) x 21.8" (H) x 4.3" (D) Net with stand: 962.7 mm (W) x 598.7 mm (H) x 157 mm (D) / 37.9" (W) x 23.6" (H) x 6.2" (D)	
Weight	Net without stand: 52 lbs / 23.6 kg (Approximately) Net with stand: 61.7 lbs / 28 kg (Approximately) (Stand is optional accessory) Gross: 62.8 lbs / 28.5 kg	
Wall mounting interface	4 Holes (400mm x 200mm)	
Complied Regulatory and Guidelines	FCC, ICES003, UL/cUL, NOM	
Power Management	VESA DPM	
Plug & Play	VESA DDC2B, DDC/CI	

Note: Specifications and functions of this monitor are subject to change without prior notice.

Supported Input Signal Resolution

Resolution	Input source					
	AV	S-Video	YPbPr	VGA	HDMI	DVI
640 x 480 @ 60Hz				○	○	○
640 x 480 @ 72Hz				○	○	○
640 x 480 @ 75Hz				○	○	○
720 x 400 @ 70Hz				○	○	○
800 x 600 @ 60Hz				○	○	○
800 x 600 @ 75Hz				○	○	○
1024 x 768 @ 60Hz				○	○	○
1024 x 768 @ 75Hz				○	○	○
1280 x 768 @ 60Hz				○	○	○
1280 x 960 @ 60Hz				○	○	○
1280 x 1024 @ 60Hz				○	○	○
1360 x 768 @ 60Hz				○	○	○
1366 x 768 @ 60Hz				○	○	○
1600 x 1200 @ 60Hz				○	○	○
1920 x 1080 @ 60Hz				○	○	○
576i (50Hz)	○	○	○		○	
480i (60Hz)	○	○	○		○	
480p (60Hz)			○		○	
576p (50Hz)			○		○	
720p (50Hz)			○		○	
720p (60Hz)			○		○	
1080i (50Hz)			○		○	
1080i (60Hz)			○		○	
1080p (50Hz)			○		○	
1080p (60Hz)			○		○	

Note:

- ○: supported
- Blank: not supported

Supported Signal Source and Resolution in PIP Mode

Note:

- ○: supported
- Blank: not supported

		Main picture														
		DVI														
		1920 x 1080 @ 60Hz	1600 x 1200 @ 60Hz	1366 x 768 @ 60Hz	1360 x 768 @ 60Hz	1280 x 1024 @ 60Hz	1280 x 960 @ 60Hz	1280 x 768 @ 60Hz	1024 x 768 @ 75Hz	1024 x 768 @ 60Hz	800 x 600 @ 75Hz	800 x 600 @ 60Hz	720 x 400 @ 70Hz	640 x 480 @ 75Hz	640 x 480 @ 72Hz	640 x 480 @ 60Hz
Sub picture																
VGA	640 x 480 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 72Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	720 x 400 @ 70Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 960 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 1024 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1360 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1366 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1600 x 1200 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	1920 x 1080 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

		Main picture														
		VGA														
		1920 x 1080 @ 60Hz	1600 x 1200 @ 60Hz	1366 x 768 @ 60Hz	1360 x 768 @ 60Hz	1280 x 1024 @ 60Hz	1280 x 960 @ 60Hz	1280 x 768 @ 60Hz	1024 x 768 @ 75Hz	1024 x 768 @ 60Hz	800 x 600 @ 75Hz	800 x 600 @ 60Hz	720 x 400 @ 70Hz	640 x 480 @ 75Hz	640 x 480 @ 72Hz	640 x 480 @ 60Hz
Sub picture																
DVI	640 x 480 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	640 x 480 @ 72Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	640 x 480 @ 75Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	720 x 400 @ 70Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	800 x 600 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	800 x 600 @ 75Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1024 x 768 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1024 x 768 @ 75Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1280 x 768 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1280 x 960 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1280 x 1024 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1360 x 768 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1366 x 768 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1600 x 1200 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	
	1920 x 1080 @ 60Hz	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	

		Main picture									
		HDMI									
		1080p (60Hz)	1080p (50Hz)	1080i (60Hz)	1080i (50Hz)	720p (60Hz)	720p (50Hz)	576p (50Hz)	480p (60Hz)	480i (60Hz)	576i (50Hz)
Sub picture											
VGA	640 x 480 @ 60Hz					○	○	○	○	○	○
	640 x 480 @ 72Hz					○	○	○	○	○	○
	640 x 480 @ 75Hz					○	○	○	○	○	○
	720 x 400 @ 70Hz					○	○	○	○	○	○
	800 x 600 @ 60Hz					○	○	○	○	○	○
	800 x 600 @ 75Hz					○	○	○	○	○	○
	1024 x 768 @ 60Hz					○	○	○	○	○	○
	1024 x 768 @ 75Hz					○	○	○	○	○	○
	1280 x 768 @ 60Hz					○	○	○	○	○	○
	1280 x 960 @ 60Hz					○	○	○	○	○	○
	1280 x 1024 @ 60Hz					○	○	○	○	○	○
	1360 x 768 @ 60Hz					○	○	○	○	○	○
	1366 x 768 @ 60Hz					○	○	○	○	○	○
	1600 x 1200 @ 60Hz					○	○	○	○	○	○
	1920 x 1080 @ 60Hz					○	○	○	○	○	○

		Main picture														
		HDMI														
		1920 x 1080 @ 60Hz	1600 x 1200 @ 60Hz	1366 x 768 @ 60Hz	1360 x 768 @ 60Hz	1280 x 1024 @ 60Hz	1280 x 960 @ 60Hz	1280 x 768 @ 60Hz	1024 x 768 @ 75Hz	1024 x 768 @ 60Hz	800 x 600 @ 75Hz	800 x 600 @ 60Hz	720 x 400 @ 70Hz	640 x 480 @ 75Hz	640 x 480 @ 72Hz	640 x 480 @ 60Hz
Sub picture																
VGA	640 x 480 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	640 x 480 @ 72Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	640 x 480 @ 75Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	720 x 400 @ 70Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	800 x 600 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	800 x 600 @ 75Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1024 x 768 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1024 x 768 @ 75Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1280 x 768 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1280 x 960 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1280 x 1024 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1360 x 768 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1366 x 768 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1600 x 1200 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	1920 x 1080 @ 60Hz	☐		☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

		Main picture												
		VGA												
		640 x 480 @ 60Hz	640 x 480 @ 72Hz	640 x 480 @ 75Hz	720 x 400 @ 70Hz	800 x 600 @ 60Hz	800 x 600 @ 75Hz	1024 x 768 @ 60Hz	1024 x 768 @ 75Hz	1280 x 768 @ 60Hz	1280 x 960 @ 60Hz	1280 x 1024 @ 60Hz	1360 x 768 @ 60Hz	1366 x 768 @ 60Hz
Sub picture														
HDMI	640 x 480 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 72Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	720 x 400 @ 70Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 75Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 960 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1280 x 1024 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1360 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1366 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1600 x 1200 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	1920 x 1080 @ 60Hz	○	○	○	○	○	○	○	○	○	○	○	○	○
	576i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	480i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	480p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	576p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	720p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	720p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	1080i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	1080i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	1080p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○
	1080p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○

		Main picture														
		DVI														
		1920 x 1080 @ 60Hz	1600 x 1200 @ 60Hz	1366 x 768 @ 60Hz	1360 x 768 @ 60Hz	1280 x 1024 @ 60Hz	1280 x 960 @ 60Hz	1280 x 768 @ 60Hz	1024 x 768 @ 75Hz	1024 x 768 @ 60Hz	800 x 600 @ 75Hz	800 x 600 @ 60Hz	720 x 400 @ 70Hz	640 x 480 @ 75Hz	640 x 480 @ 72Hz	640 x 480 @ 60Hz
Sub picture																
YPbPr	576i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	480i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	480p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	576p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	720p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	720p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	1080i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	1080i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	1080p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	1080p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

		Main picture											
		YPbPr											
		1080p (60Hz)	1080p (50Hz)	1080i (60Hz)	1080i (50Hz)	720p (60Hz)	720p (50Hz)	576p (50Hz)	480p (60Hz)	480i (60Hz)	576i (50Hz)		
Sub picture													
DVI	640 x 480 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	640 x 480 @ 72Hz	○	○	○	○	○	○	○	○	○	○		
	640 x 480 @ 75Hz	○	○	○	○	○	○	○	○	○	○		
	720 x 400 @ 70Hz	○	○	○	○	○	○	○	○	○	○		
	800 x 600 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	800 x 600 @ 75Hz	○	○	○	○	○	○	○	○	○	○		
	1024 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1024 x 768 @ 75Hz	○	○	○	○	○	○	○	○	○	○		
	1280 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1280 x 960 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1280 x 1024 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1360 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1366 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1600 x 1200 @ 60Hz	○	○	○	○	○	○	○	○	○	○		
	1920 x 1080 @ 60Hz	○	○	○	○	○	○	○	○	○	○		

		Main picture									
		HDMI									
		576i (50Hz)	480i (60Hz)	480p (60Hz)	576p (50Hz)	720p (50Hz)	720p (60Hz)	1080i (50Hz)	1080i (60Hz)	1080p (50Hz)	1080p (60Hz)
Sub picture											
YPbPr	576i (50Hz)	○	○	○	○	○	○	○	○	○	○
	480i (60Hz)	○	○	○	○	○	○	○	○	○	○
	480p (60Hz)	○	○	○	○	○	○	○	○	○	○
	576p (50Hz)	○	○	○	○	○	○	○	○	○	○
	720p (50Hz)	○	○	○	○	○	○	○	○	○	○
	720p (60Hz)	○	○	○	○	○	○	○	○	○	○
	1080i (50Hz)	○	○	○	○	○	○	○	○	○	○
	1080i (60Hz)	○	○	○	○	○	○	○	○	○	○
	1080p (50Hz)	○	○	○	○	○	○	○	○	○	○
	1080p (60Hz)	○	○	○	○	○	○	○	○	○	○

		Main picture														
		HDMI														
		1920 x 1080 @ 60Hz	1600 x 1200 @ 60Hz	1366 x 768 @ 60Hz	1360 x 768 @ 60Hz	1280 x 1024 @ 60Hz	1280 x 960 @ 60Hz	1280 x 768 @ 60Hz	1024 x 768 @ 75Hz	1024 x 768 @ 60Hz	800 x 600 @ 75Hz	800 x 600 @ 60Hz	720 x 400 @ 70Hz	640 x 480 @ 75Hz	640 x 480 @ 72Hz	640 x 480 @ 60Hz
Sub picture																
YPbPr	576i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	480i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	480p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	576p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	720p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	720p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	1080i (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	1080i (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	1080p (50Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		
	1080p (60Hz)	○	○	○	○	○	○	○	○	○	○	○	○	○		

		Main picture									
		YPbPr									
		1080p (60Hz)	1080p (50Hz)	1080i (60Hz)	1080i (50Hz)	720p (60Hz)	720p (50Hz)	576p (50Hz)	480p (60Hz)	480i (60Hz)	576i (50Hz)
Sub picture											
HDMI	640 x 480 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 72Hz	○	○	○	○	○	○	○	○	○	○
	640 x 480 @ 75Hz	○	○	○	○	○	○	○	○	○	○
	720 x 400 @ 70Hz	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	800 x 600 @ 75Hz	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1024 x 768 @ 75Hz	○	○	○	○	○	○	○	○	○	○
	1280 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1280 x 960 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1280 x 1024 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1360 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1366 x 768 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1600 x 1200 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	1920 x 1080 @ 60Hz	○	○	○	○	○	○	○	○	○	○
	576i (50Hz)	○	○	○	○	○	○	○	○	○	○
	480i (60Hz)	○	○	○	○	○	○	○	○	○	○
	480p (60Hz)	○	○	○	○	○	○	○	○	○	○
	576p (50Hz)	○	○	○	○	○	○	○	○	○	○
	720p (50Hz)	○	○	○	○	○	○	○	○	○	○
	720p (60Hz)	○	○	○	○	○	○	○	○	○	○
	1080i (50Hz)	○	○	○	○	○	○	○	○	○	○
	1080i (60Hz)	○	○	○	○	○	○	○	○	○	○
	1080p (50Hz)	○	○	○	○	○	○	○	○	○	○
	1080p (60Hz)	○	○	○	○	○	○	○	○	○	○

Customer Support

For technical support or product service, see the table below or contact your reseller.

NOTE: You will need the product serial number.

Country/Region	Web Site	Telephone	Email
Australia/New Zealand	www.viewsonic.com.au	AUS= 1800 880 818 NZ= 0800 008 822	service@au.viewsonic.com
Canada	www.viewsonic.com	T (Toll-Free)= 1-866-463-4775 T (Toll)= 1-424-233-2533 F= 1-909-468-1202	service.ca@viewsonic.com
Europe	www.viewsoniceurope.com	www.viewsoniceurope.com/uk/Support/Calldesk.htm	
Hong Kong	www.hk.viewsonic.com	T= 852 3102 2900	service@hk.viewsonic.com
India	www.in.viewsonic.com	T= 1800 11 9999	service@in.viewsonic.com
Ireland (Eire)	www.viewsoniceurope.com/uk/	www.viewsoniceurope.com/uk/support/call-desk/	service_ie@viewsoniceurope.com
Korea	www.kr.viewsonic.com	T= 080 333 2131	service@kr.viewsonic.com
Latin America (Argentina)	www.viewsonic.com/la/	T= 0800 666 0194	soporte@viewsonic.com
Latin America (Chile)	www.viewsonic.com/la/	T= 800 440 303	soporte@viewsonic.com
Latin America (Columbia)	www.viewsonic.com/la/	T= 01 800 915 6588	soporte@viewsonic.com
Latin America (Mexico)	www.viewsonic.com/la/	T= 001 800 514 6518	soporte@viewsonic.com
Renta y Datos, 29 SUR 721, COL. LA PAZ, 72160 PUEBLA, PUE. Tel: 01.222.891.55.77 CON 10 LINEAS Electroser, Av Reforma No. 403Gx39 y 41, 97000 Mérida, Yucatán. Tel: 01.999.925.19.16 Other places please refer to http://www.viewsonic.com/la/soporte/index.htm#Mexico			
Latin America (Peru)	www.viewsonic.com/la/	T= 0800 53458	soporte@viewsonic.com
Macau	www.hk.viewsonic.com	T= 853 2870 0303	service@hk.viewsonic.com
Middle East	ap.viewsonic.com/me/	Contact your reseller	service@ap.viewsonic.com
Puerto Rico & Virgin Islands	www.viewsonic.com	T= 1-800-688-6688 (English) T= 1-866-379-1304 (Spanish) F= 1-909-468-1202	service.us@viewsonic.com soporte@viewsonic.com"
Singapore/Malaysia/Thailand	www.viewsonic.com.sg	T= 65 6461 6044	service@sg.viewsonic.com
South Africa	ap.viewsonic.com/za/	Contact your reseller	service@ap.viewsonic.com
United Kingdom	www.viewsoniceurope.com/uk/	www.viewsoniceurope.com/uk/support/call-desk/	service_gb@viewsoniceurope.com
United States	www.viewsonic.com	T (Toll-Free)= 1-800-688-6688 T (Toll)= 1-424-233-2530 F= 1-909-468-1202	service.us@viewsonic.com

Limited Warranty

ViewSonic LCD Monitor

What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic LCD Monitors are warranted for 1 year for all parts excluding the light source and 1 year for labor from the date of the first customer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by ViewSonic.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electric power fluctuations or failure.
 - f. Use of supplies or parts not meeting ViewSonic's specifications.
 - g. Normal wear and tear.
 - h. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, and set-up service charges.

How to get service:

1. For information about receiving service under warranty, contact ViewSonic Customer Support (please refer to Customer Support page). You will need to provide your product's serial number.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized ViewSonic service center or ViewSonic.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.

Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A. and Canada:

For warranty information and service on ViewSonic products sold outside of the U.S.A. and Canada, contact ViewSonic or your local ViewSonic dealer.

The warranty period for this product in mainland China (Hong Kong, Macao and Taiwan Excluded) is subject to the terms and conditions of the Maintenance Guarantee Card.

For users in Europe and Russia, full details of warranty provided can be found in www.viewsoniceurope.com under Support/Warranty Information.

Mexico Limited Warranty

ViewSonic LCD Monitor

What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components & accessories.

How long the warranty is effective:

ViewSonic LCD Monitors are warranted for 1 year for all parts excluding the light source and 1 year for labor from the date of the first customer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, unauthorized attempted repair, or failure to follow instructions supplied with the product.
 - b. Any damage of the product due to shipment.
 - c. Causes external to the product, such as electrical power fluctuations or failure.
 - d. Use of supplies or parts not meeting ViewSonic's specifications.
 - e. Normal wear and tear.
 - f. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, and set-up service charges.

How to get service:

For information about receiving service under warranty, contact ViewSonic Customer Support (Please refer to the attached Customer Support page). You will need to provide your product's serial number, so please record the product information in the space provided below on your purchase for your future use. Please retain your receipt of proof of purchase to support your warranty claim.

For Your Records

Product Name: _____ Model Number: _____
Document Number: _____ Serial Number: _____
Purchase Date: _____ Extended Warranty Purchase? _____ (Y/N)
If so, what date does warranty expire? _____

1. To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
2. Take or ship the product in the original container packaging to an authorized ViewSonic service center.
3. Round trip transportation costs for in-warranty products will be paid by ViewSonic.

Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.
4. Repair or attempted repair by anyone not authorized by ViewSonic.

Contact Information for Sales & Authorized Service (Centro Autorizado de Servicio) within Mexico:	
<i>Name, address, of manufacturer and importers:</i> México, Av. de la Palma #8 Piso 2 Despacho 203, Corporativo Interpalmas, Col. San Fernando Huixquilucan, Estado de México Tel: (55) 3605-1099 http://www.viewsonic.com/la/soporte/index.htm	
NÚMERO GRATIS DE ASISTENCIA TÉCNICA PARA TODO MÉXICO: 001.866.823.2004	
Hermosillo: Distribuciones y Servicios Computacionales SA de CV. Calle Juárez 284 local 2 Col. Bugambillas C.P: 83140 Tel: 01-66-22-14-9005 E-Mail: disc2@hmo.megared.net.mx	Villahermosa: Compumantenimientos Garantizados, S.A. de C.V. AV. GREGORIO MENDEZ #1504 COL. FLORIDA C.P. 86040 Tel: 01 (993) 3 52 00 47 / 3522074 / 3 52 20 09 E-Mail: compumantenimientos@prodigy.net.mx
Puebla, Pue. (Matriz): RENTA Y DATOS, S.A. DE C.V. Domicilio: 29 SUR 721 COL. LA PAZ 72160 PUEBLA, PUE. Tel: 01(52).222.891.55.77 CON 10 LINEAS E-Mail: datos@puebla.megared.net.mx	Veracruz, Ver.: CONEXION Y DESARROLLO, S.A DE C.V. Av. Americas # 419 ENTRE PINZÓN Y ALVARADO Fracc. Reforma C.P. 91919 Tel: 01-22-91-00-31-67 E-Mail: gacosta@qplus.com.mx
Chihuahua Soluciones Globales en Computación C. Magisterio # 3321 Col. Magisterial Chihuahua, Chih. Tel: 4136954 E-Mail: Cefeo@soluglobales.com	Cuernavaca Compusupport de Cuernavaca SA de CV Francisco Leyva # 178 Col. Miguel Hidalgo C.P. 62040, Cuernavaca Morelos Tel: 01 777 3180579 / 01 777 3124014 E-Mail: aquevedo@compusupportcva.com
Distrito Federal: QPLUS, S.A. de C.V. Av. Coyoacán 931 Col. Del Valle 03100, México, D.F. Tel: 01(52)55-50-00-27-35 E-Mail : gacosta@qplus.com.mx	Guadalajara, Jal.: SERVICRECE, S.A. de C.V. Av. Niños Héroes # 2281 Col. Arcos Sur, Sector Juárez 44170, Guadalajara, Jalisco Tel: 01(52)33-36-15-15-43 E-Mail: mmiranda@servicrece.com
Guerrero AcapulcoGS Computación (Grupo Sesicomp) Progreso #6-A, Colo Centro 39300 Acapulco, Guerrero Tel: 744-48-32627	Monterrey: Global Product Services Mar Caribe # 1987, Esquina con Golfo Pérsico Fracc. Bernardo Reyes, CP 64280 Monterrey N.L. México Tel: 8129-5103 E-Mail: aydeem@gps1.com.mx
MÉRIDA: ELECTROSER Av Reforma No. 403Gx39 y 41 Mérida, Yucatán, México CP97000 Tel: (52) 999-925-1916 E-Mail: rrrb@sureste.com	Oaxaca, Oax.: CENTRO DE DISTRIBUCION Y SERVICIO, S.A. de C.V. Murguía # 708 P.A., Col. Centro, 68000, Oaxaca Tel: 01(52)95-15-15-22-22 Fax: 01(52)95-15-13-67-00 E-Mail: gpotai2001@hotmail.com
Tijuana: STD Av Ferrocarril Sonora #3780 L-C Col 20 de Noviembre Tijuana, Mexico	FOR USA SUPPORT: ViewSonic Corporation 381 Brea Canyon Road, Walnut, CA. 91789 USA Tel: 800-688-6688 (English); 866-323-8056 (Spanish); Fax: 1-800-685-7276 E-Mail: http://www.viewsonic.com

